



Crack Pitts Backyard



Kit Contents:

*Fuselage
*Wings
*Canopy
*Vertical Stab

*Horizontal Stab
*SFG's
*Accessory Pack
*Backbone

*Wing Struts
*Torsion Strips
*Wing Spar
*Carbon parts:
- 2x $\varnothing 1 \times 500$... Stabs pushrods


Accessory Pack Contents:

Control/servo horns set
Motor mount
Plywood reinforcement
Heatshrink tube 4 cm
4x Adjustable link+quicklock washer
Wood wing struts 1,5x5x150

Wood fuselage stiffener 2x9x150mm
Wood fuselage stiffener 2x9x90mm
2x Wood wing struts 1,5x5x150mm
4x "Z" bends
2x Carbon $\varnothing 1,5 \times 165$ mm ... Ailerons connection
2x Carbon $\varnothing 1,5 \times 110$ mm ... Aileron pushrod

Plywood frame:










1. Aileron horn
2. Horizontal+Vertical stabilizer horn
3. Aileron servo arm extension
4. Horizontal+Vertical stab. servo arm ext.
5. Pushrod guides
6. Interlinking aileron control horns










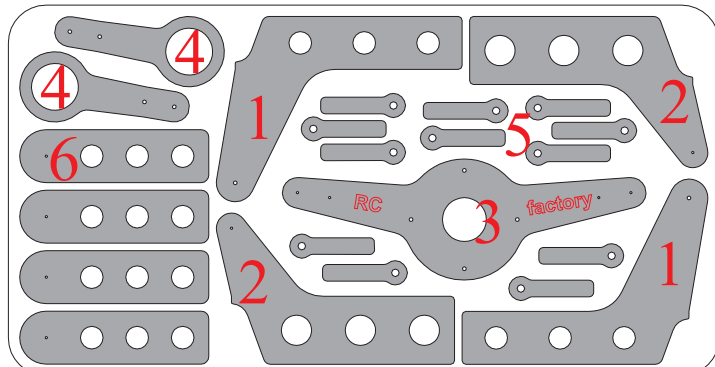









You Will Also Need:







* CA medium+thin, CA kicker
* Sharp hobby knife
* Screwdriver







* Ruler
* Sandpaper 100-500

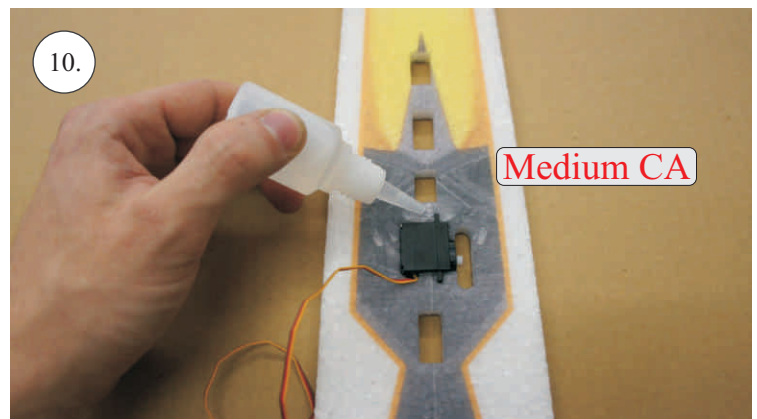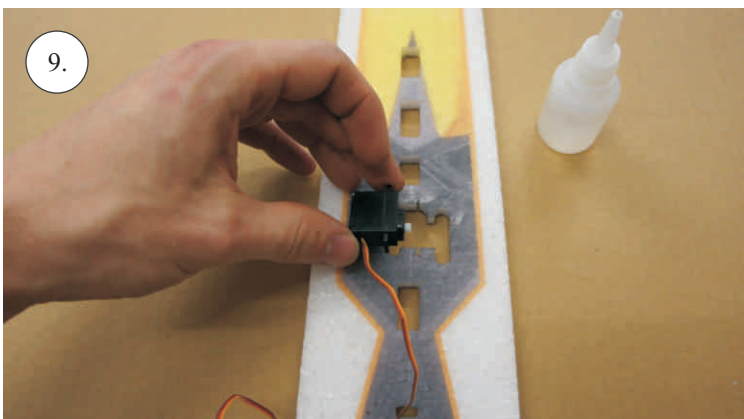
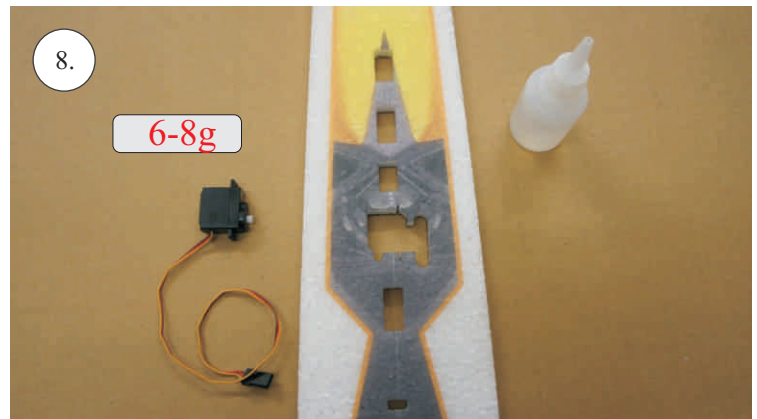
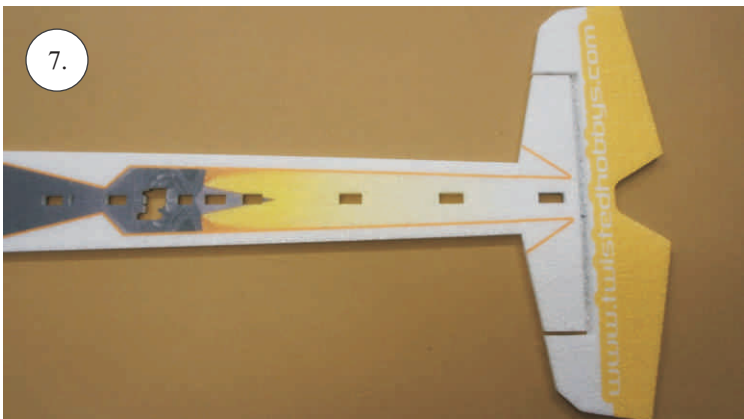
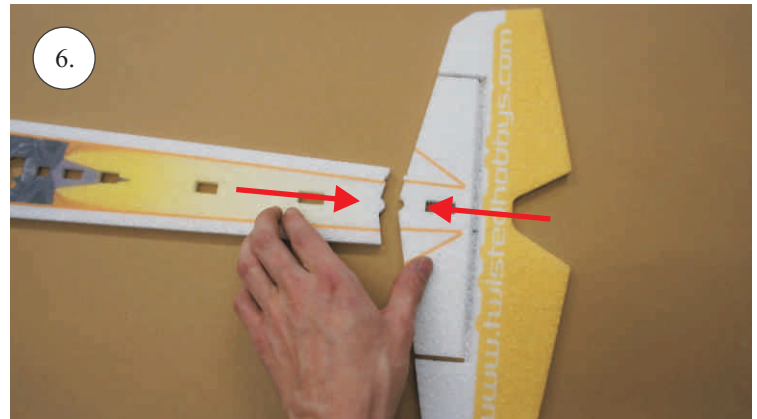
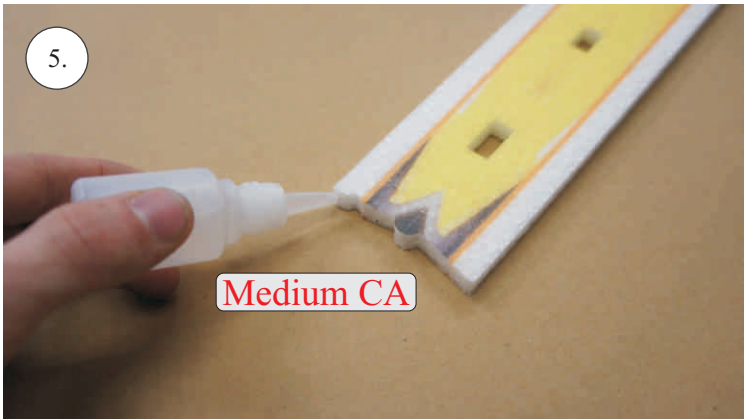
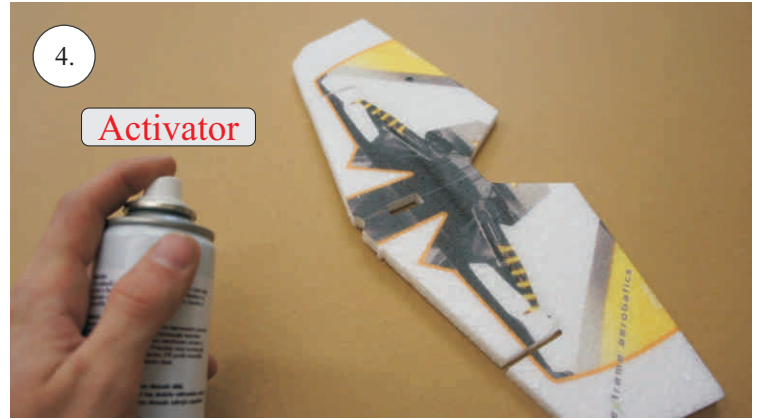
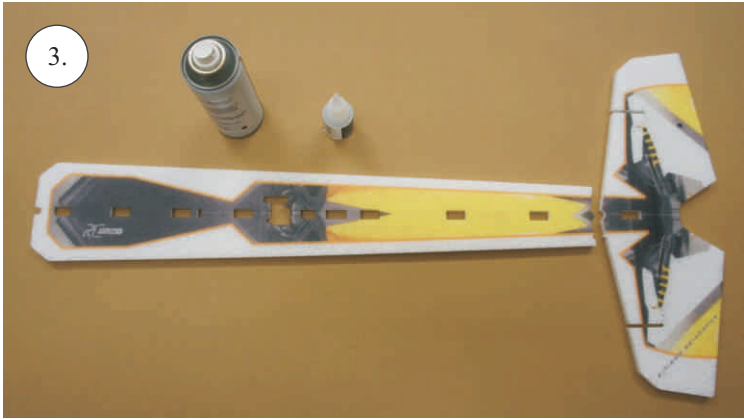
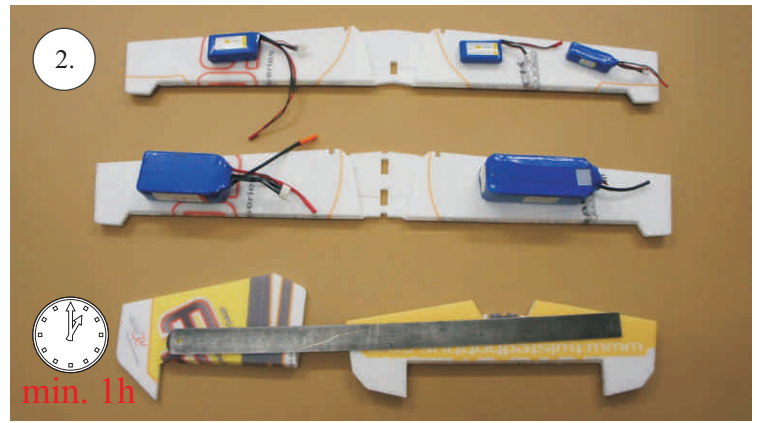


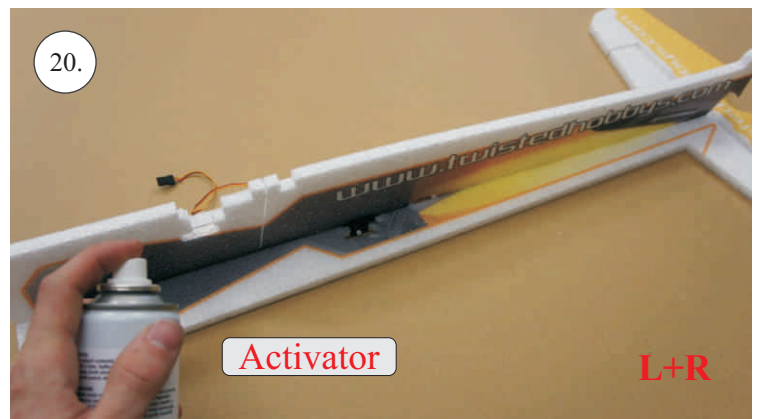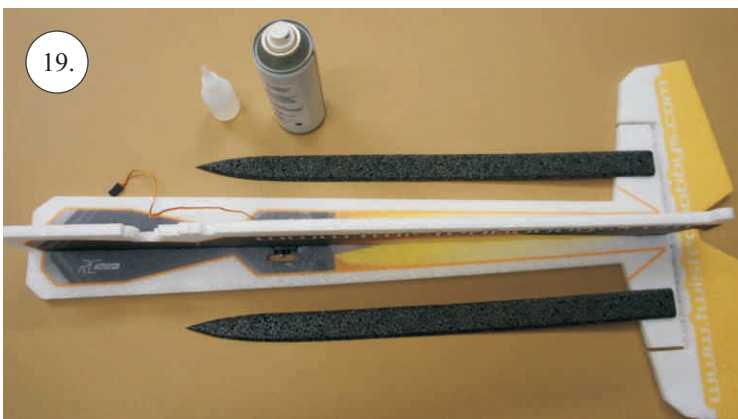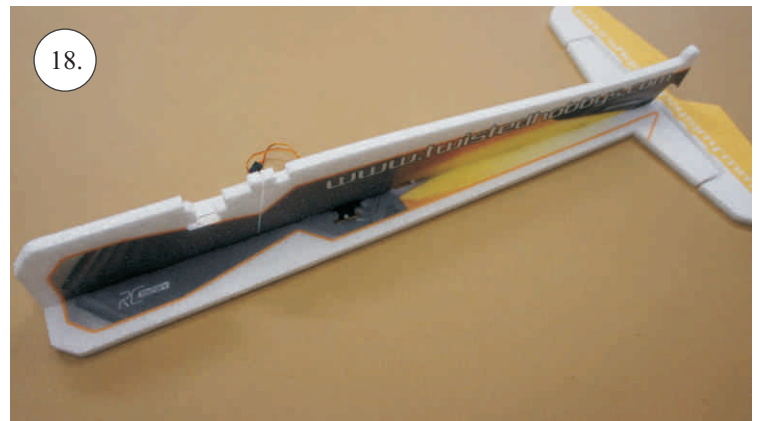
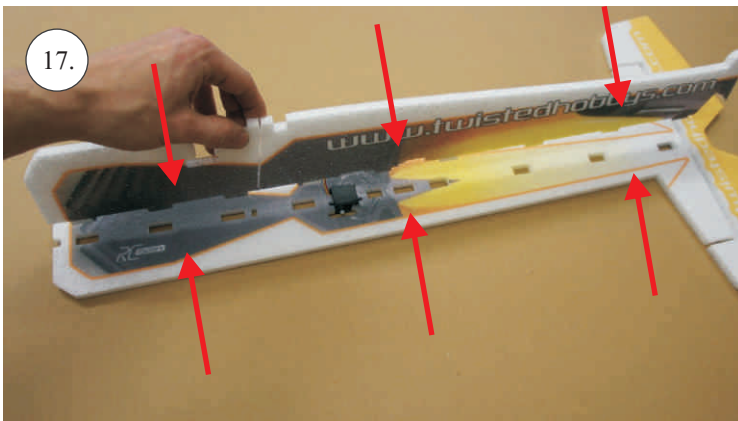
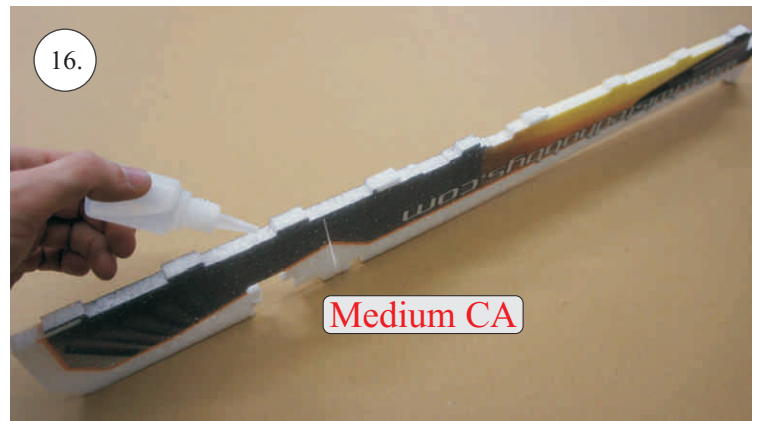
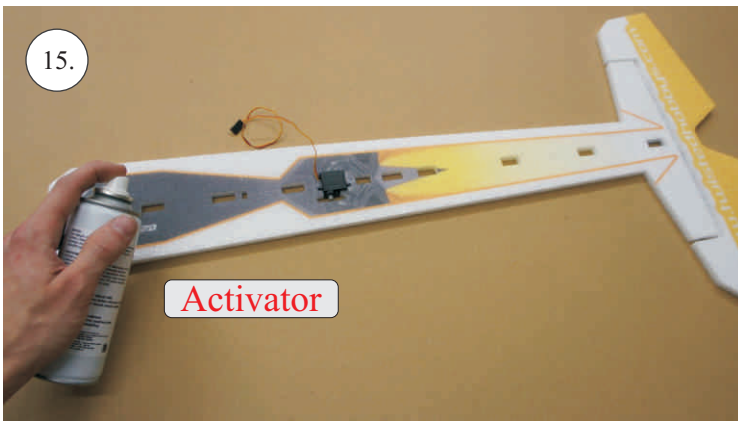
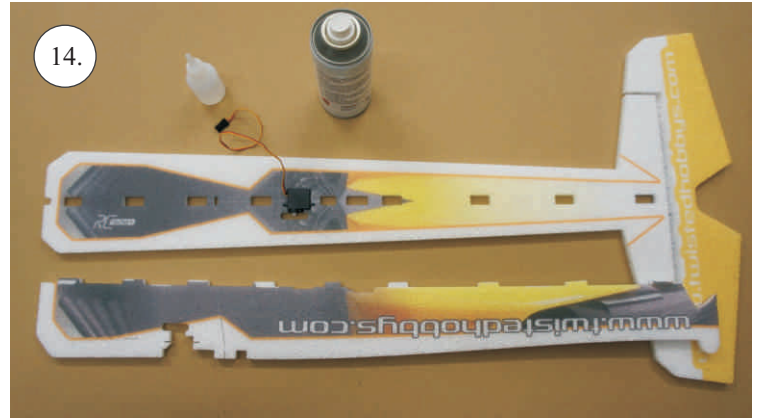
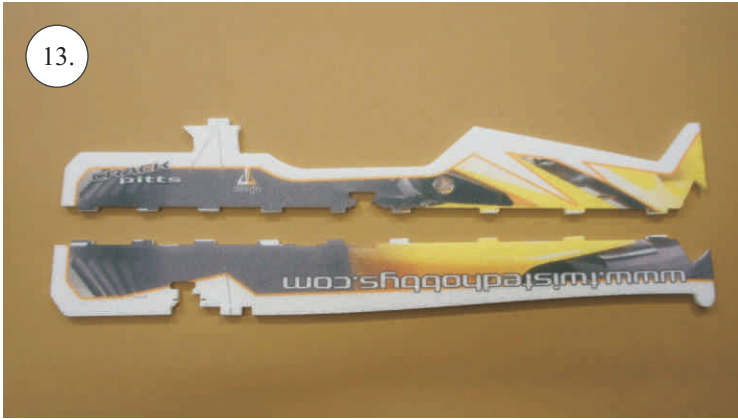
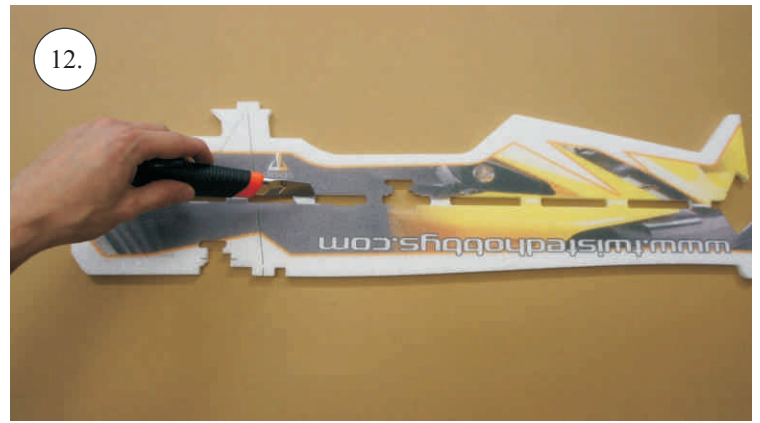
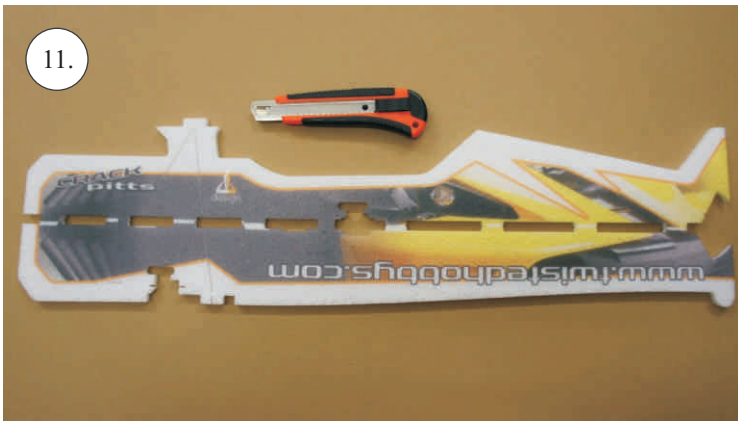



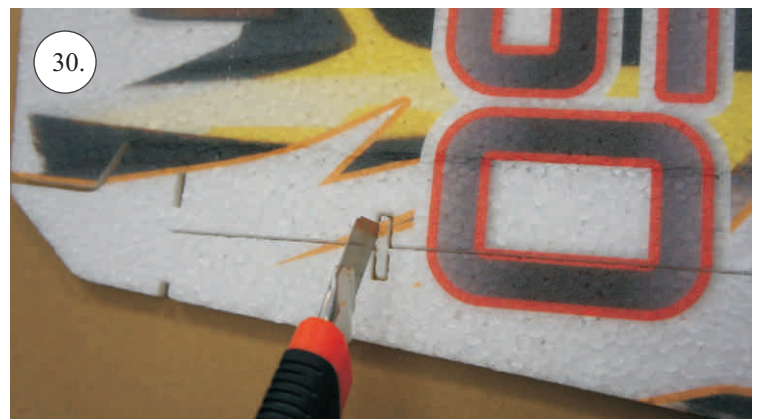
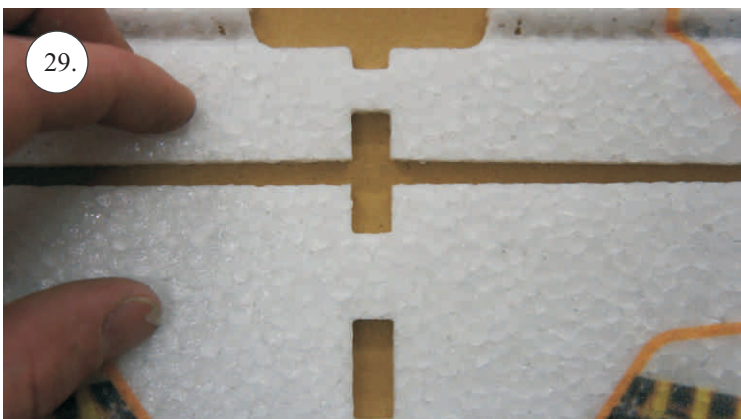
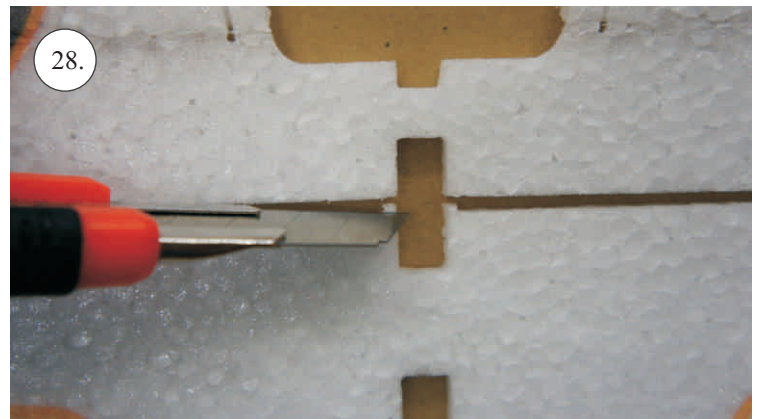
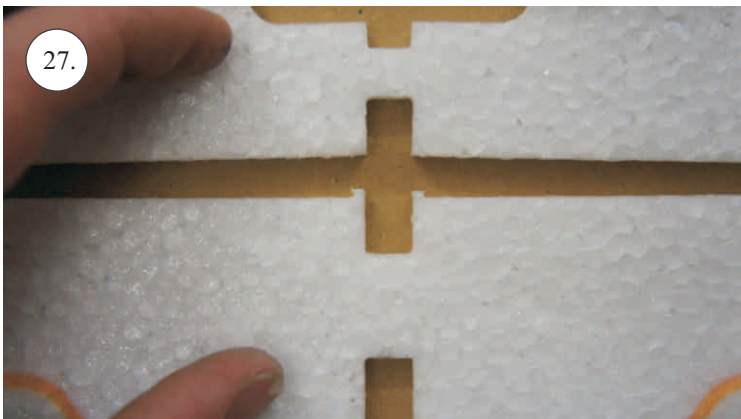
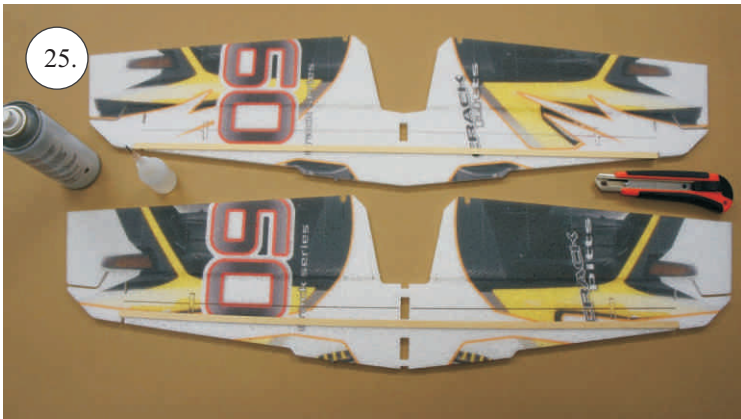
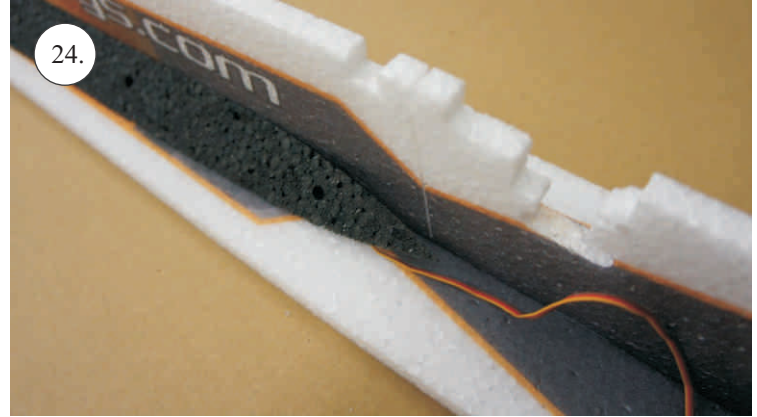
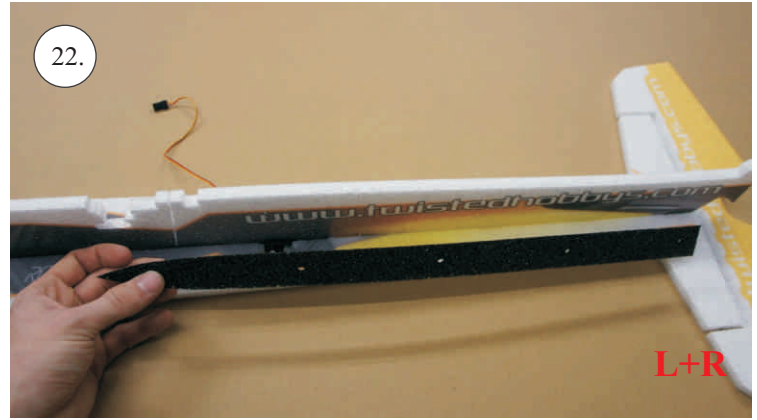




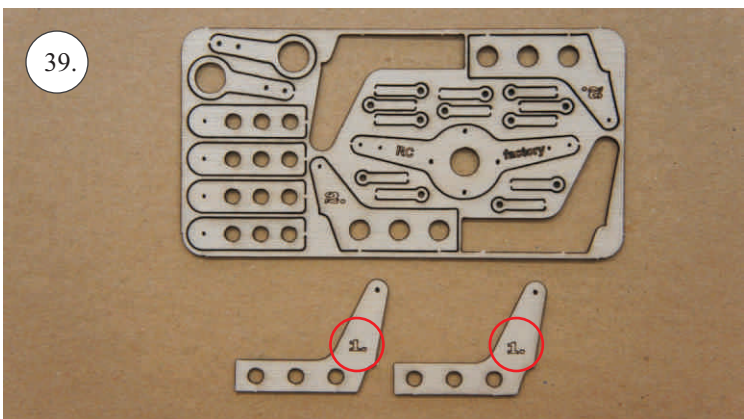
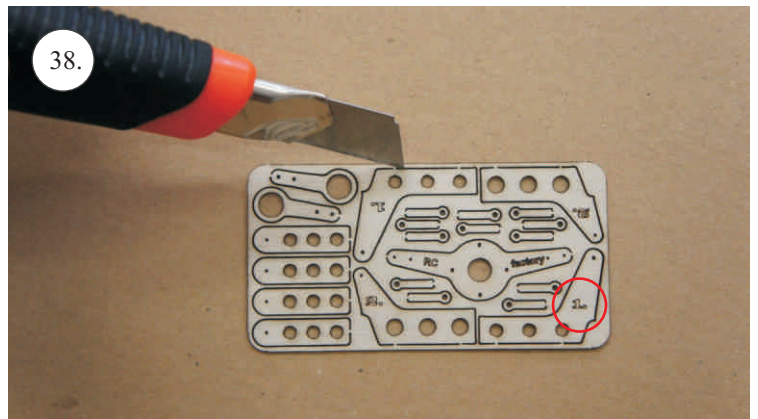
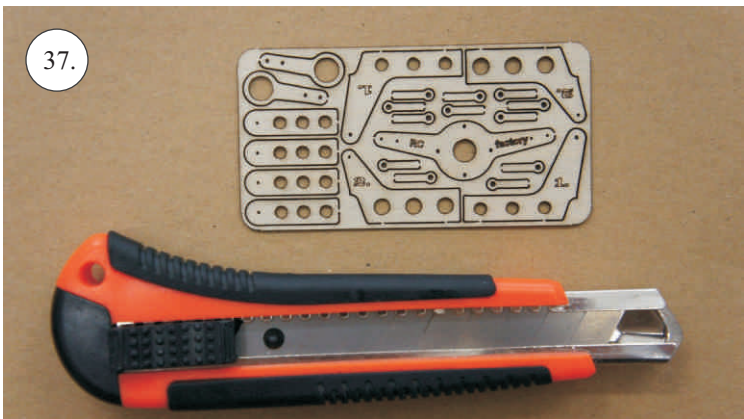
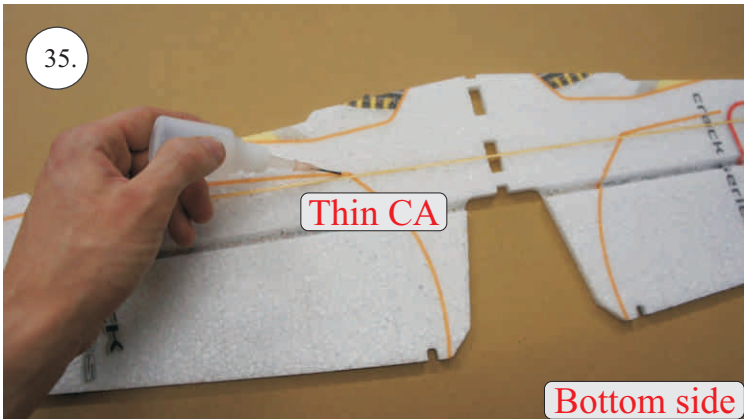
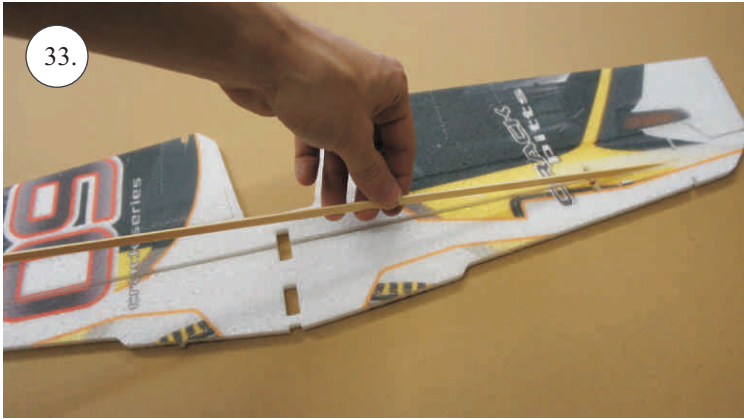
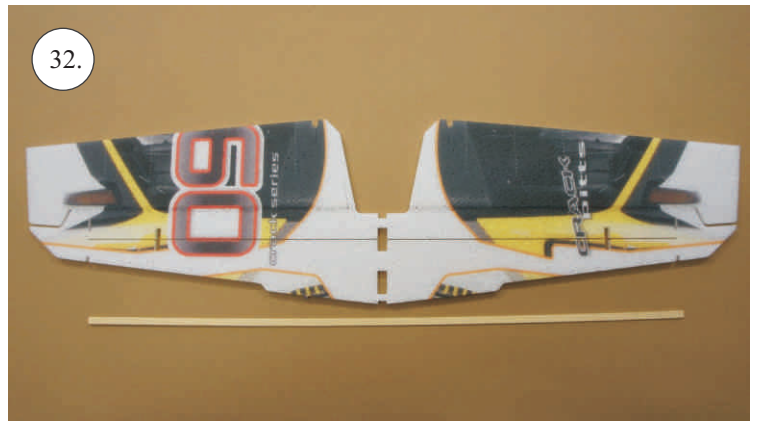


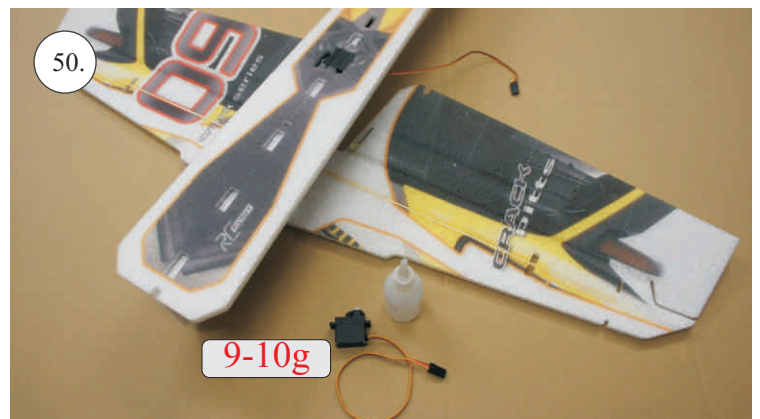
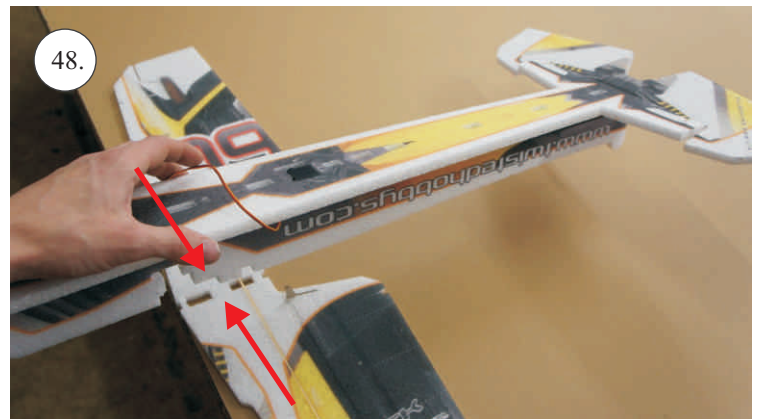
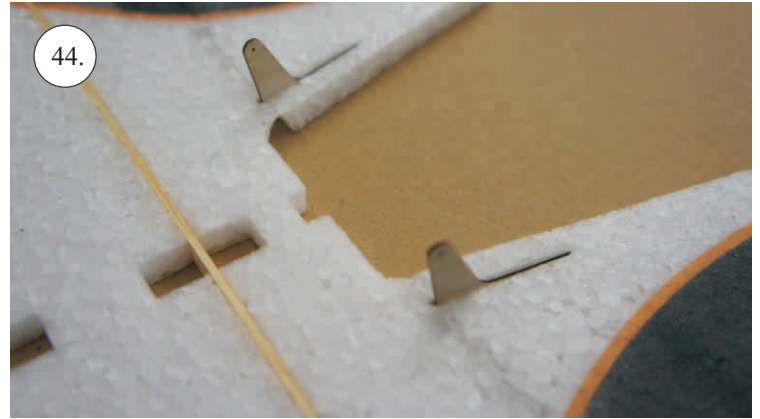
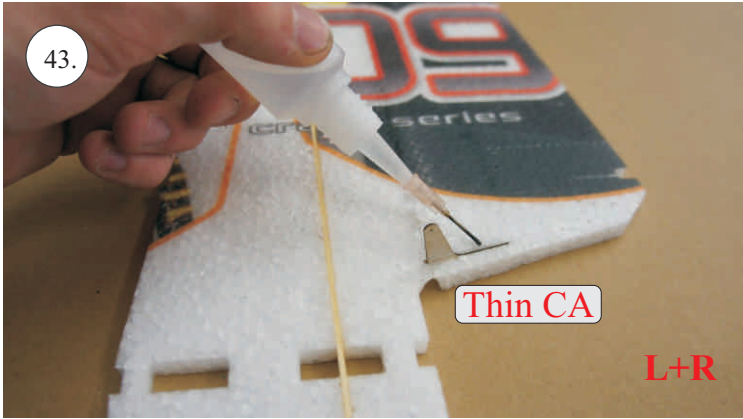
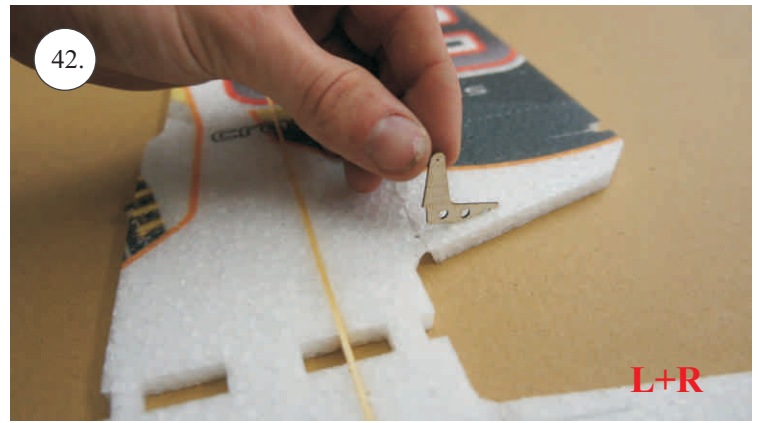
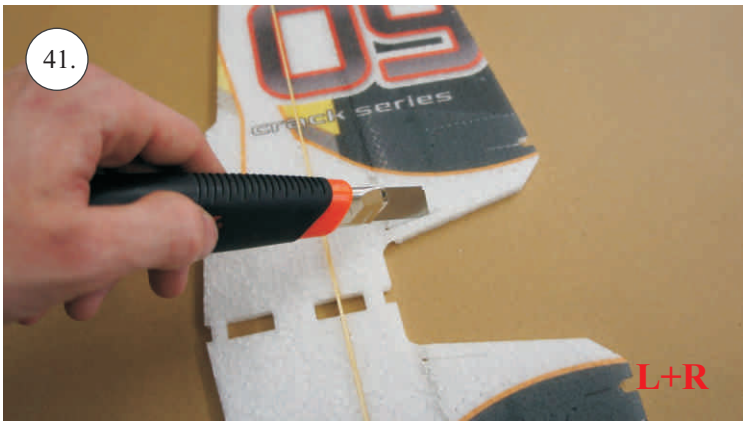



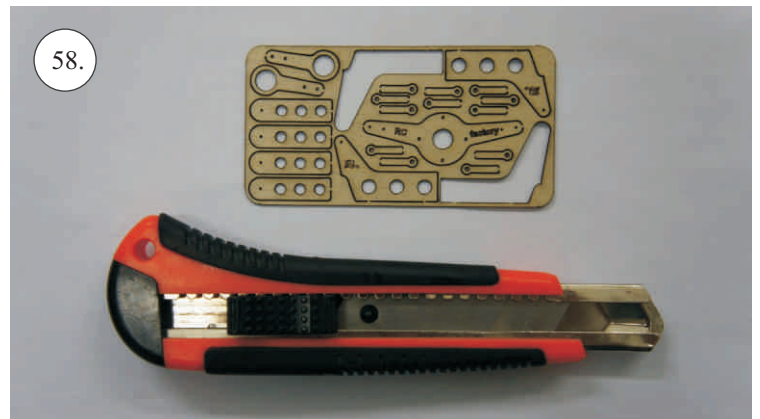
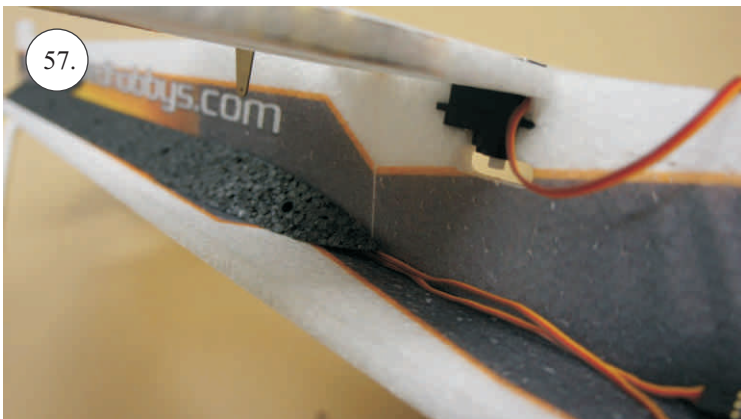
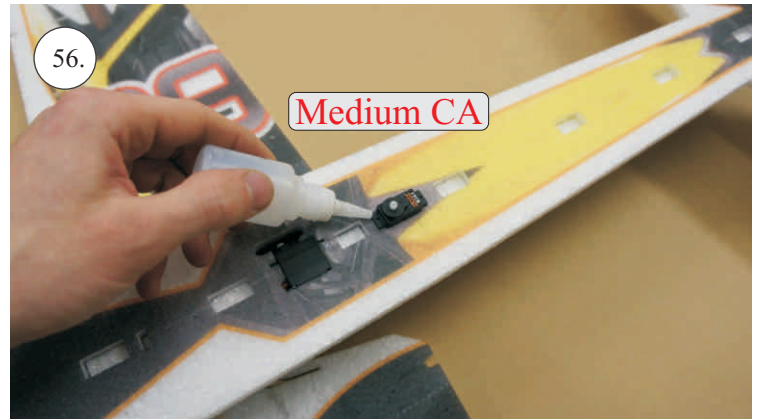
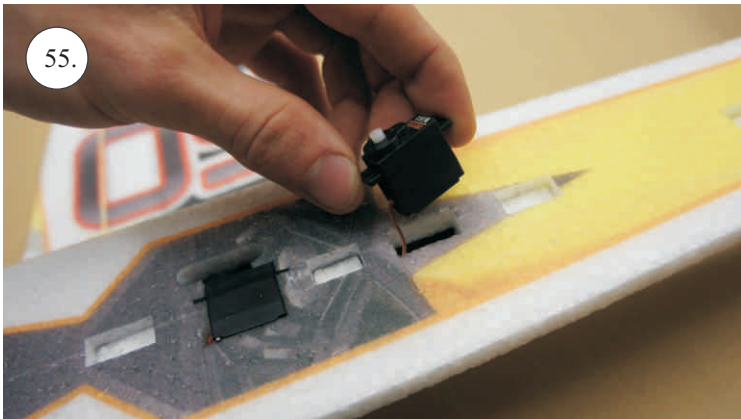
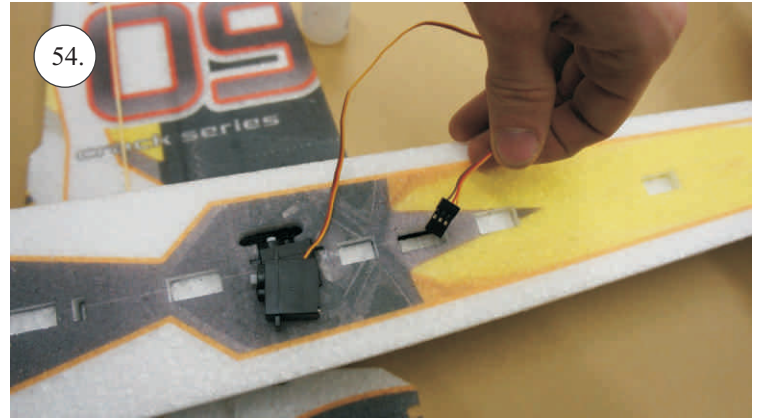
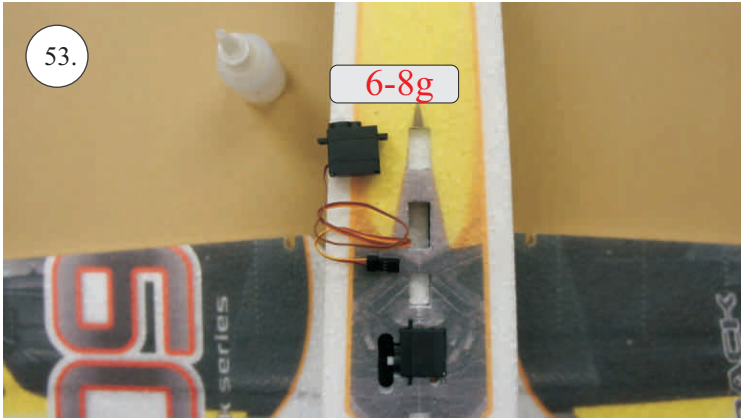
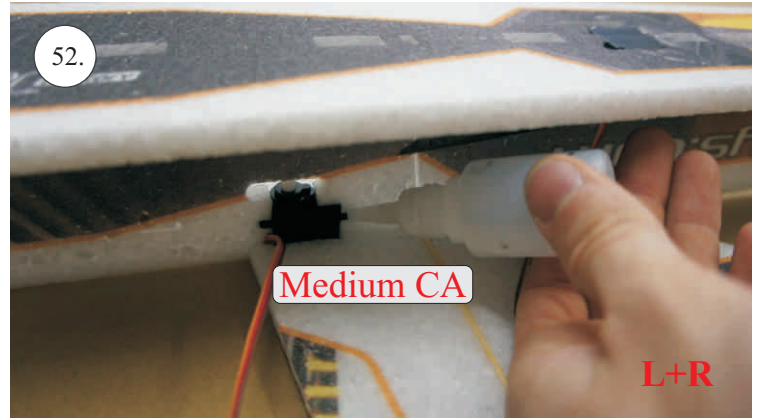
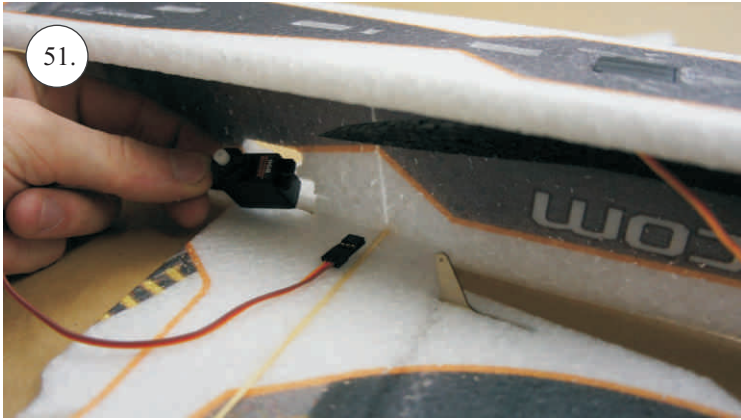


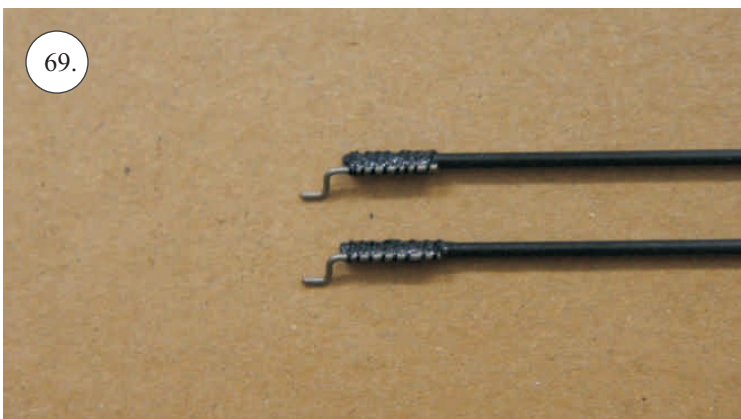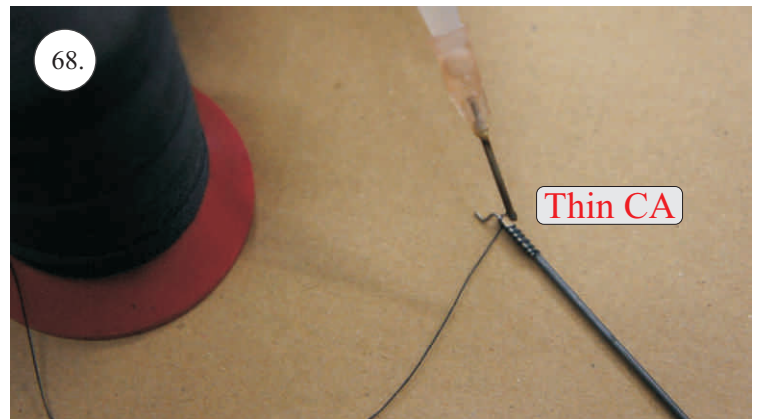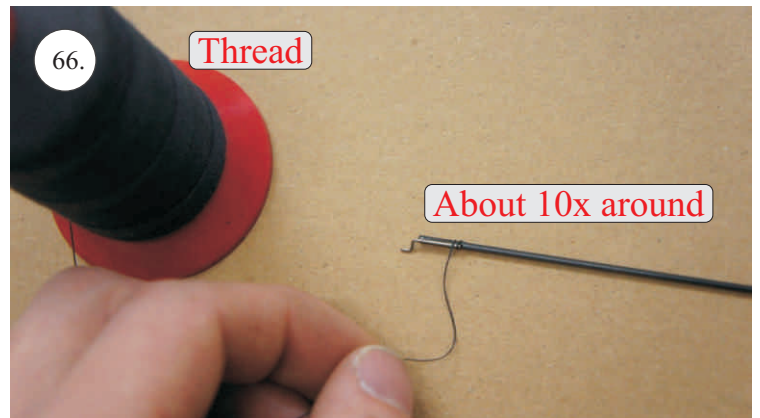
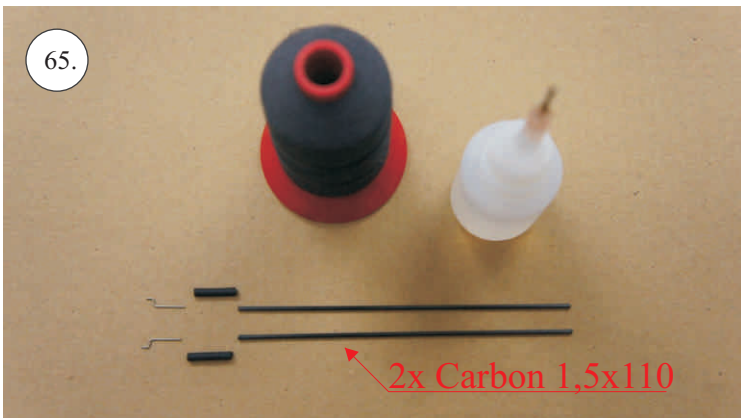
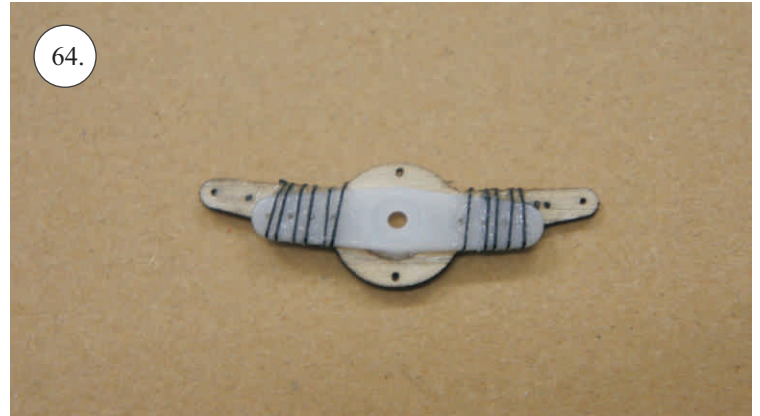
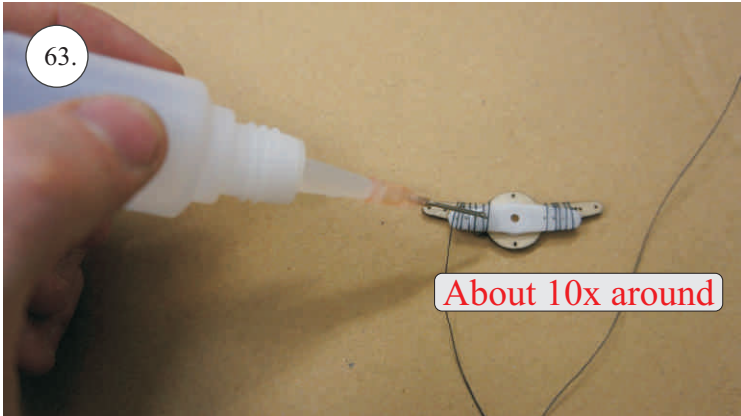
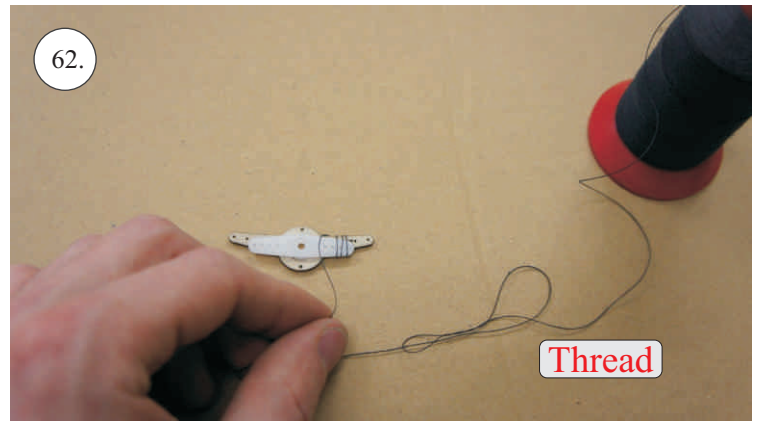
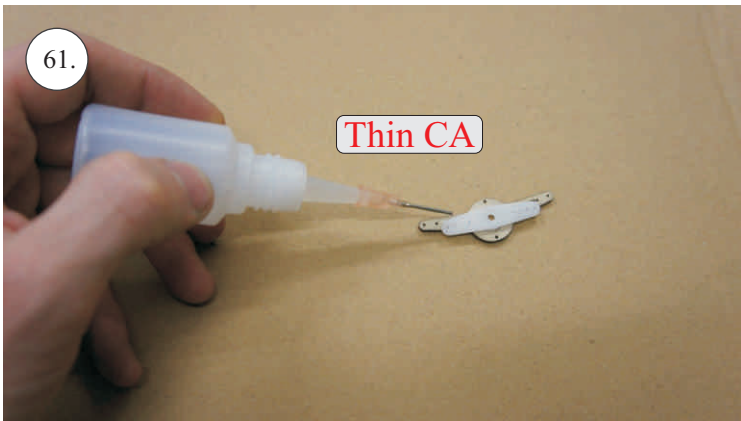




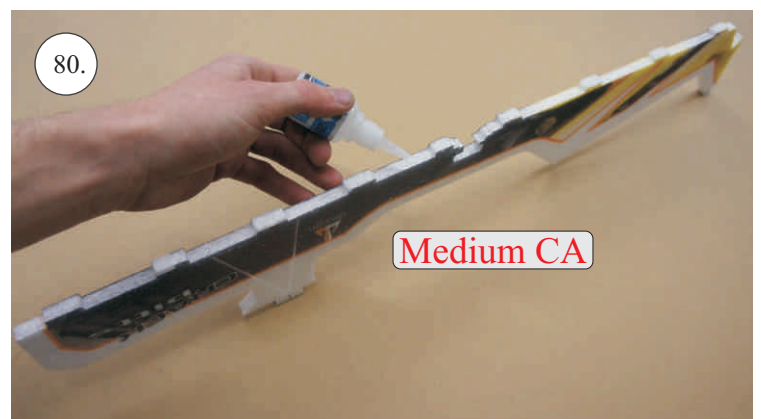
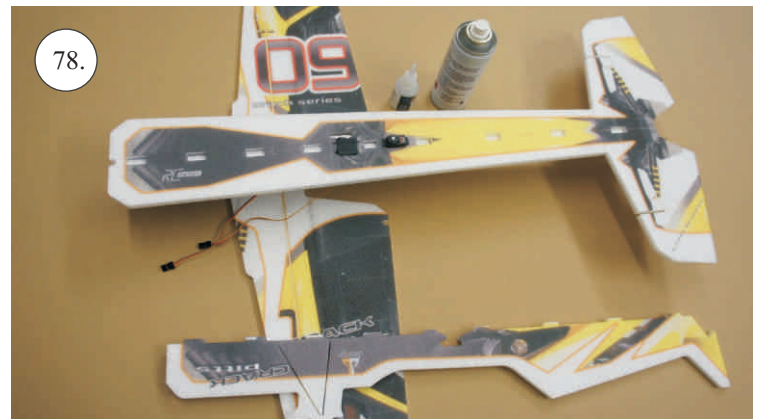
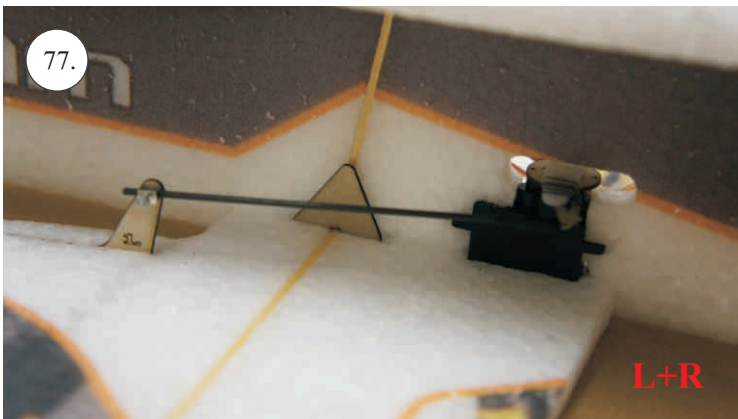
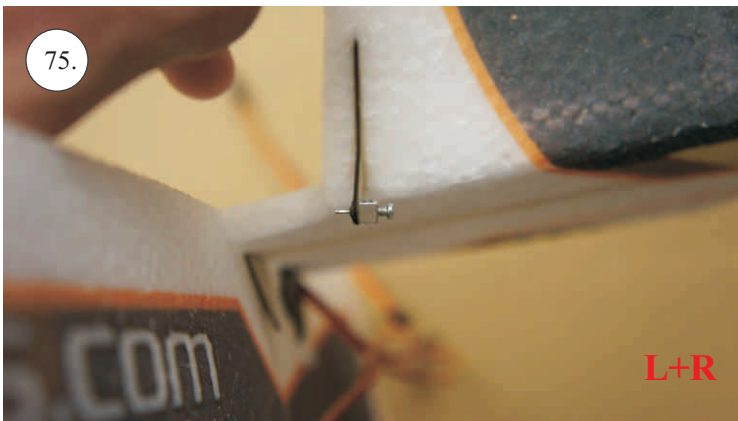
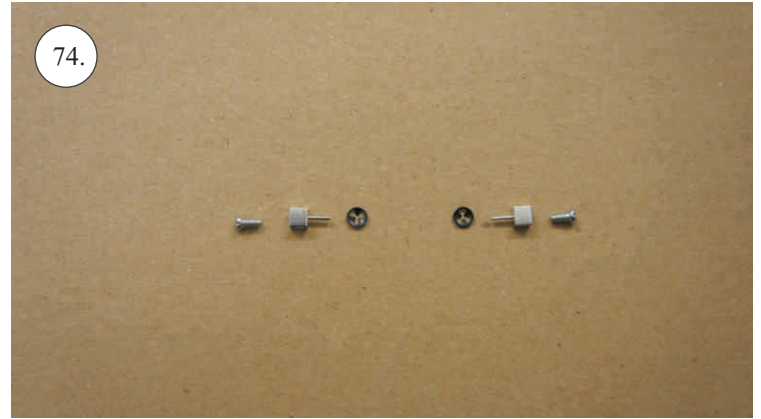
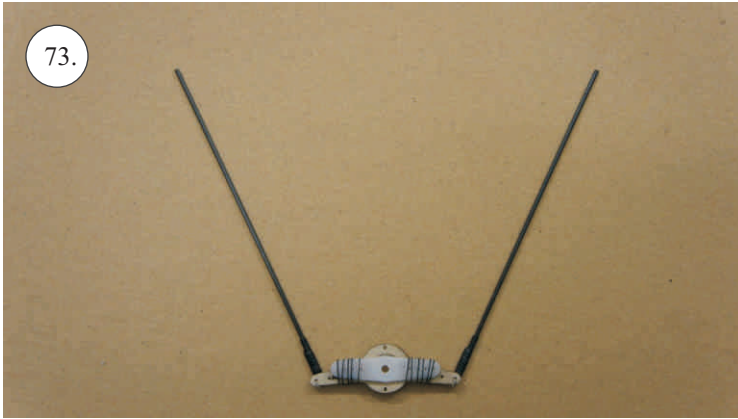
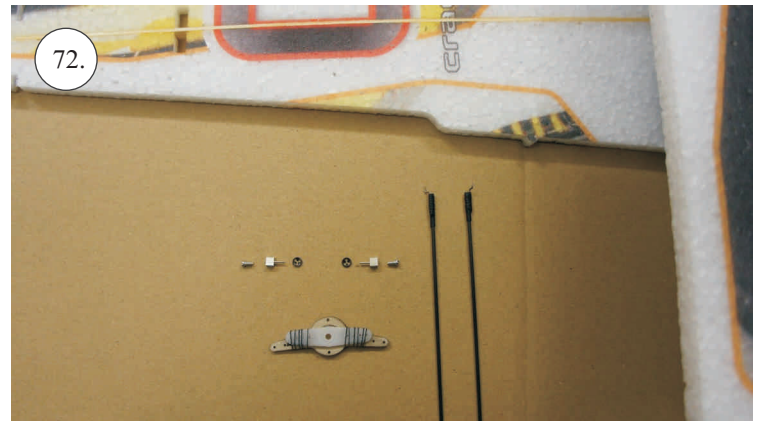
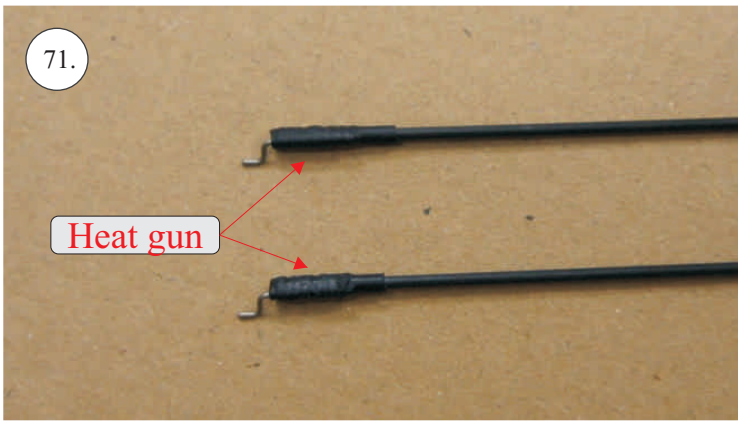


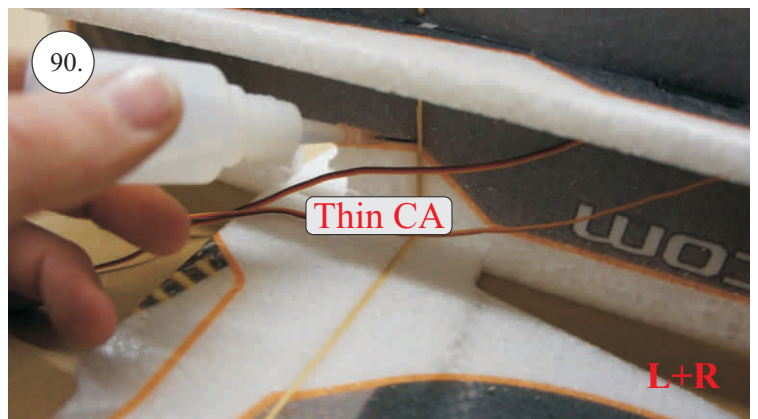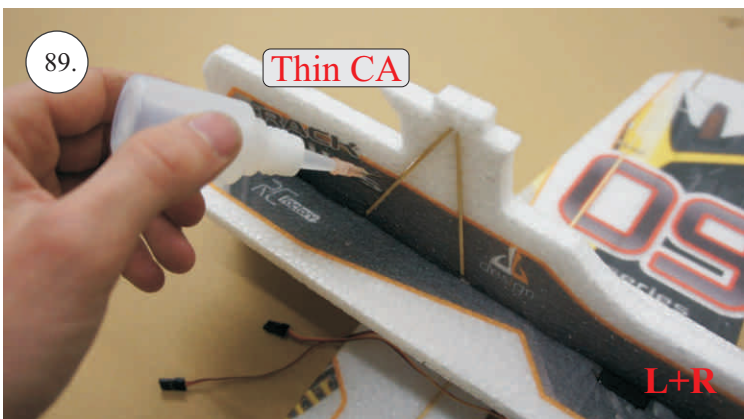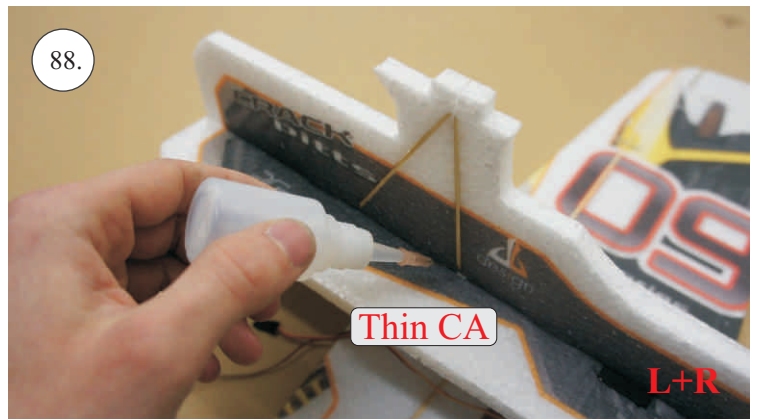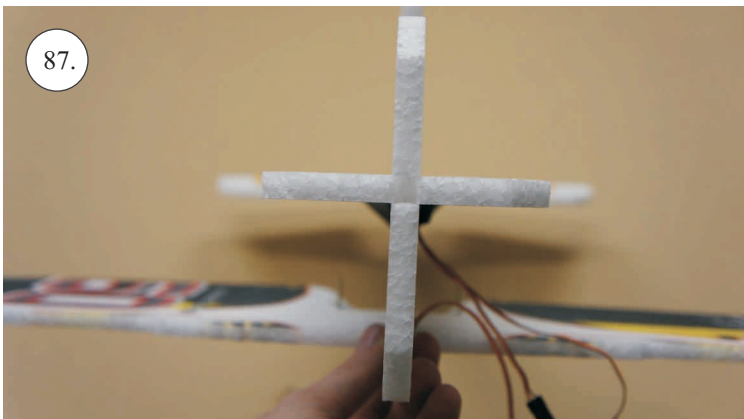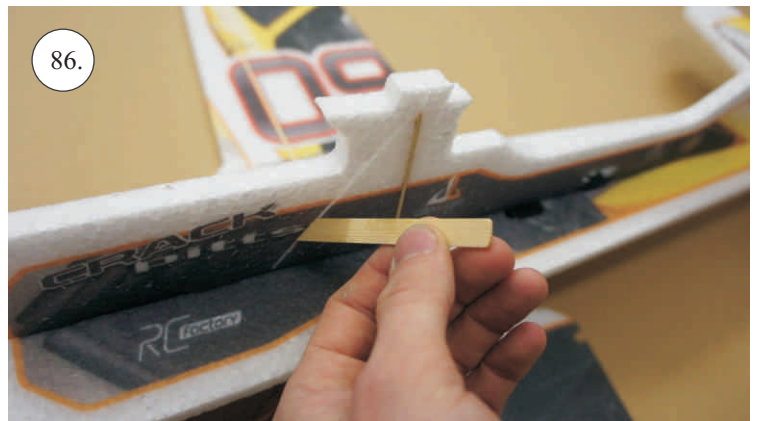
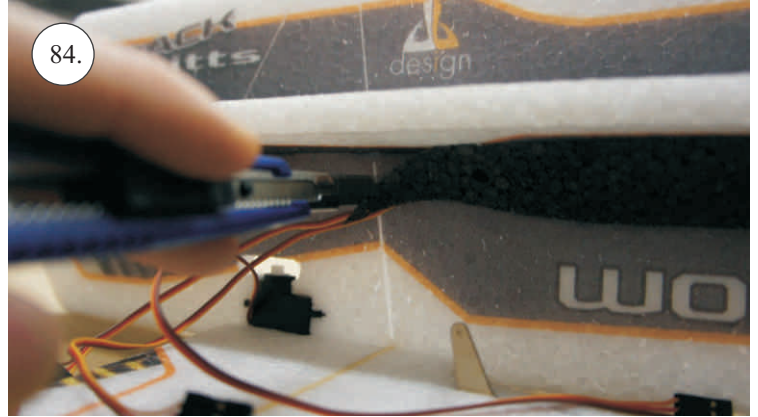
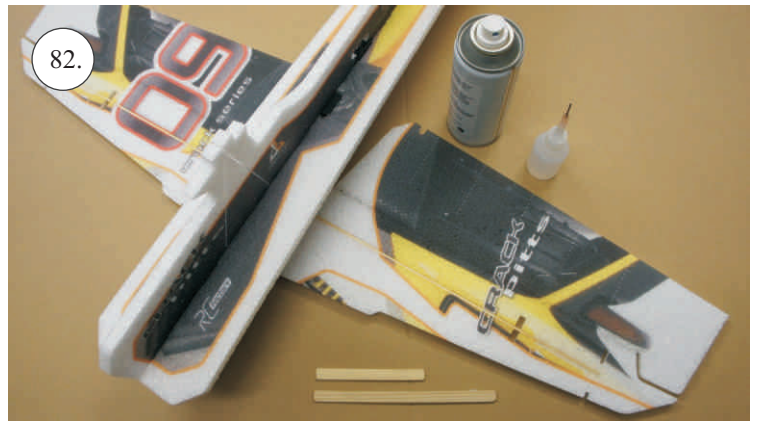
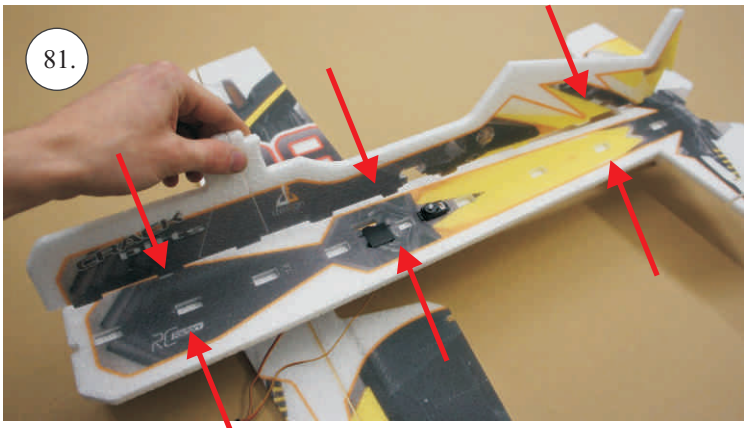


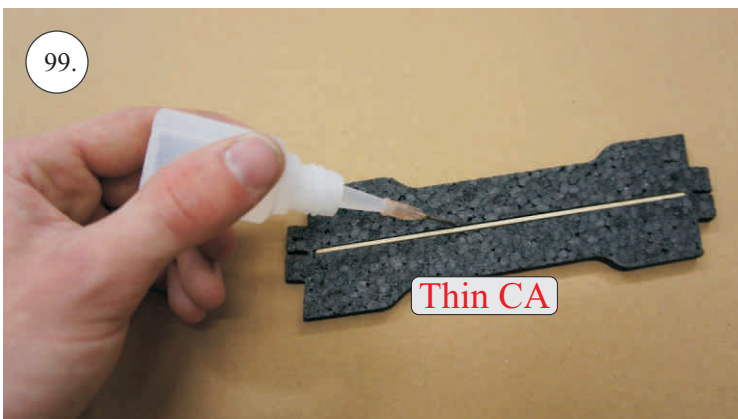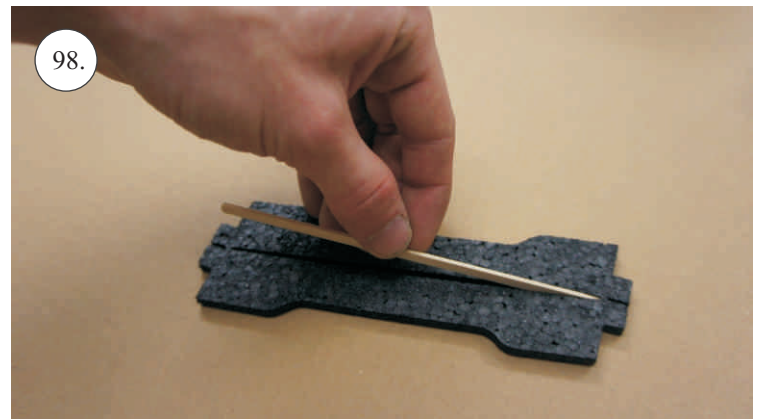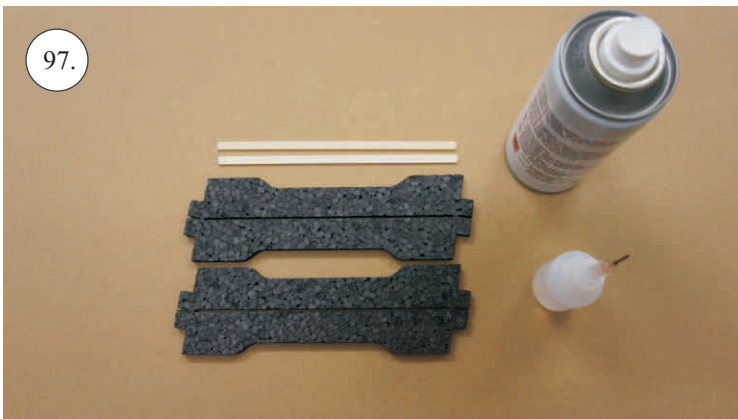
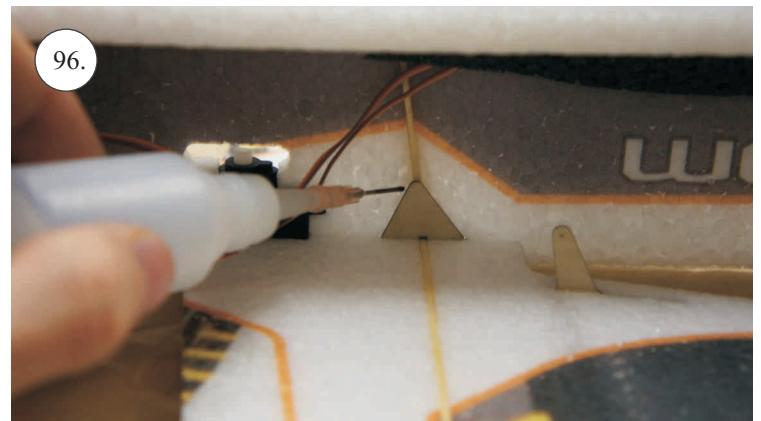
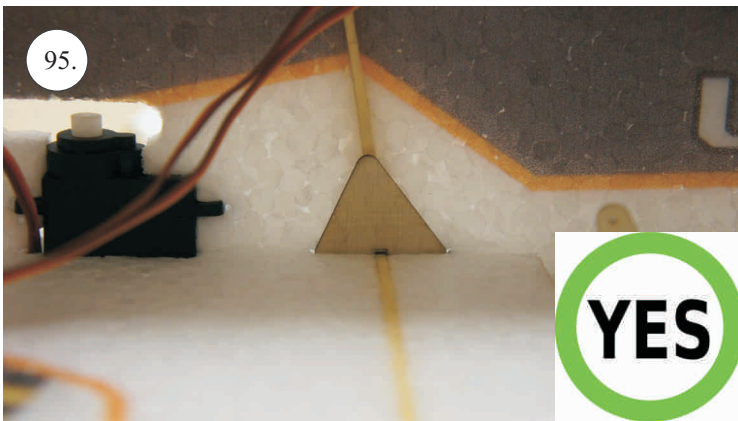
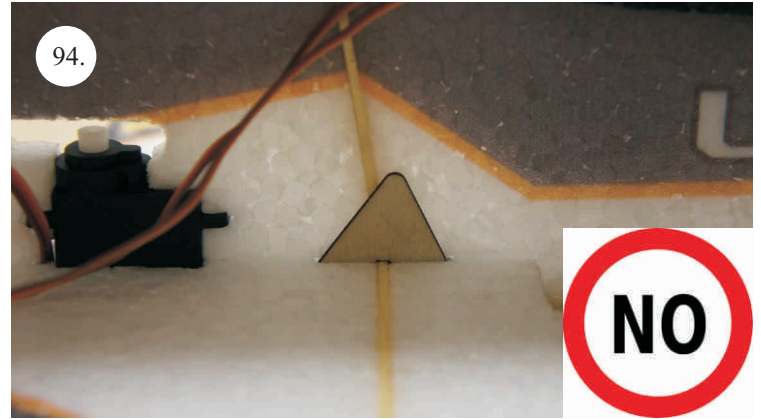


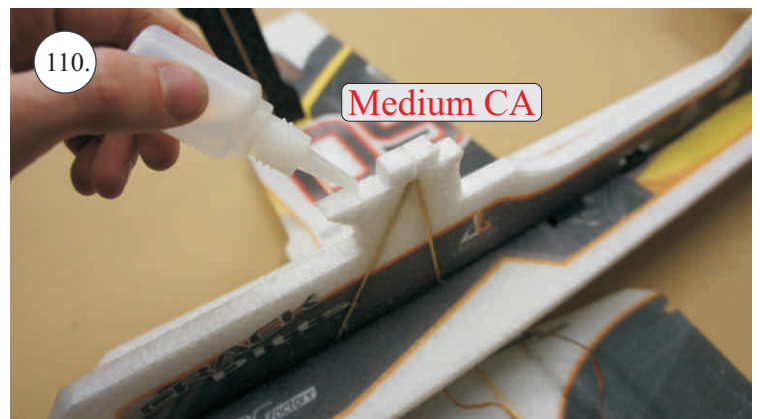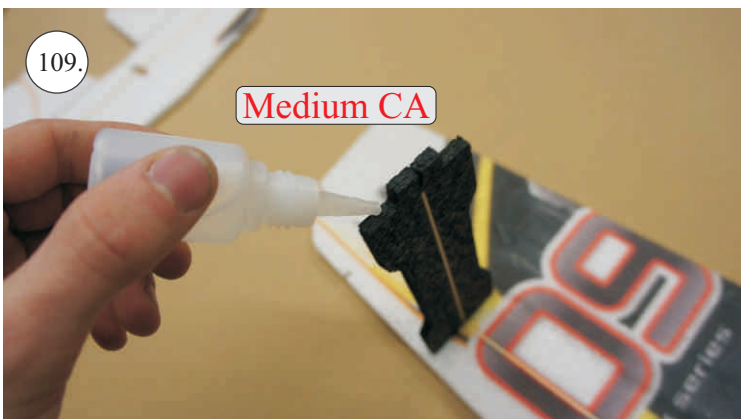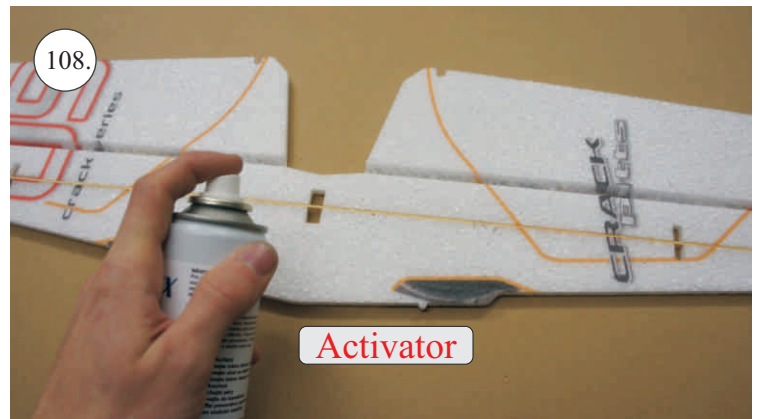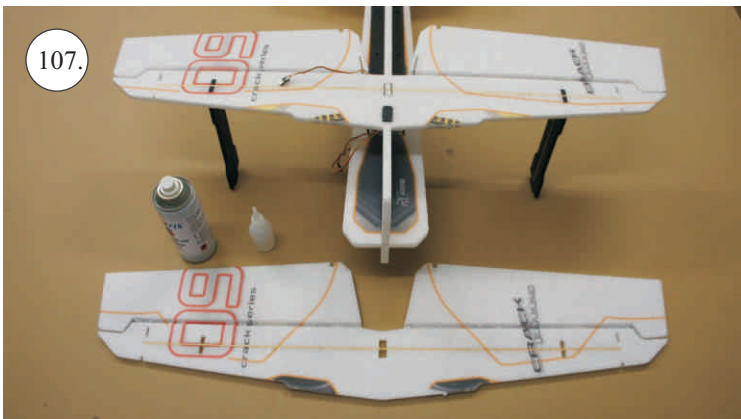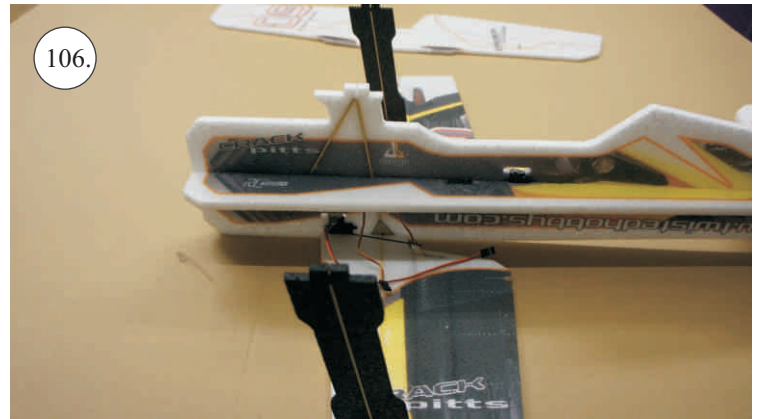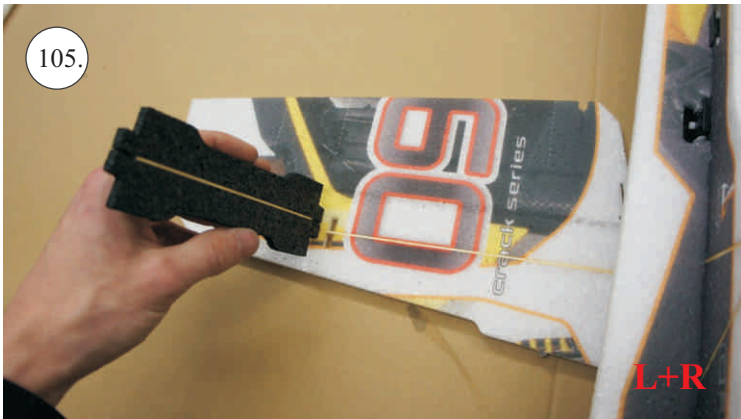
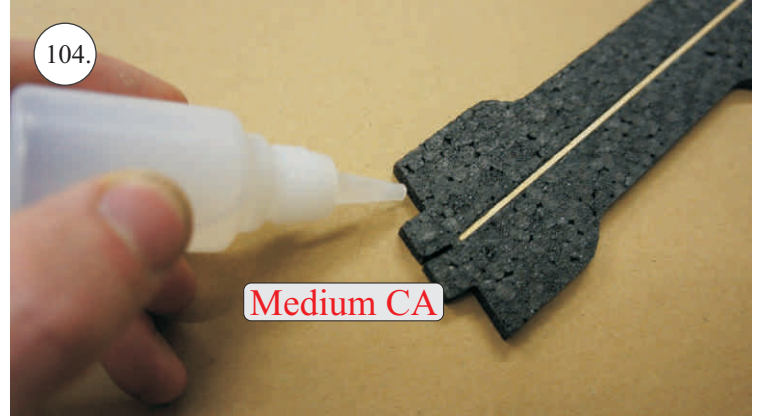
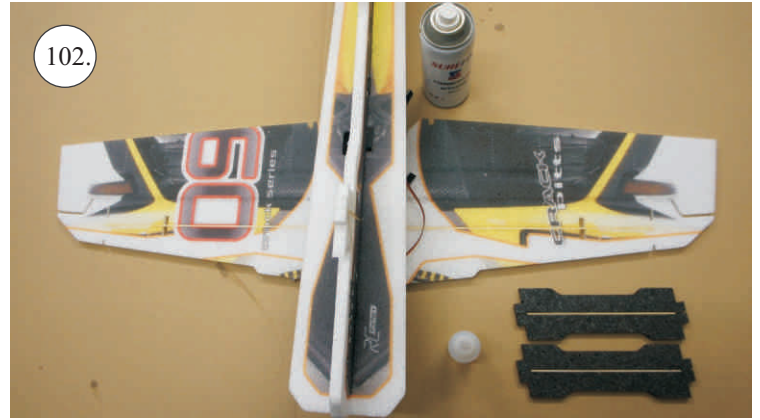
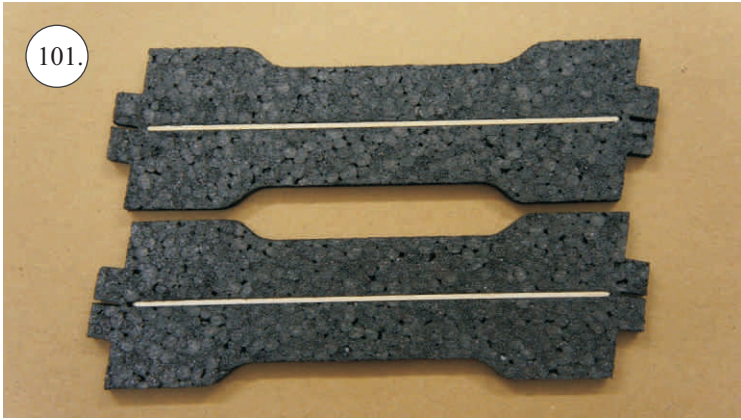


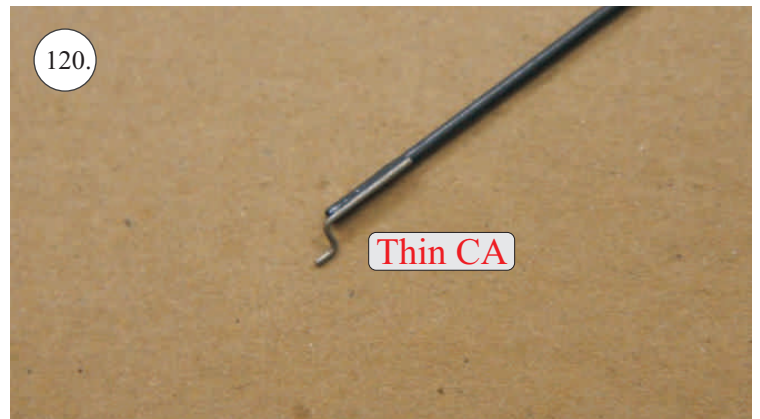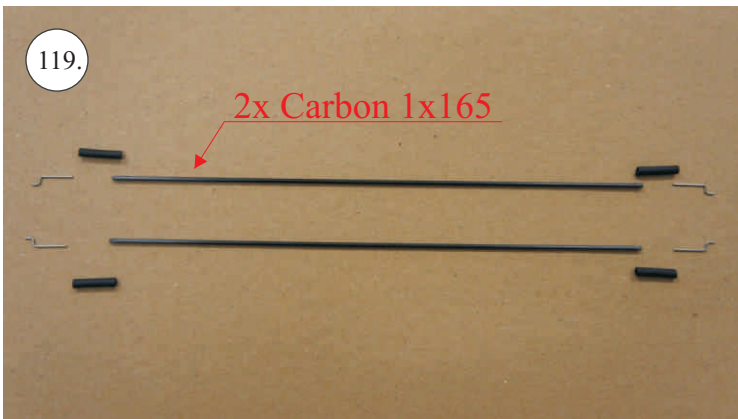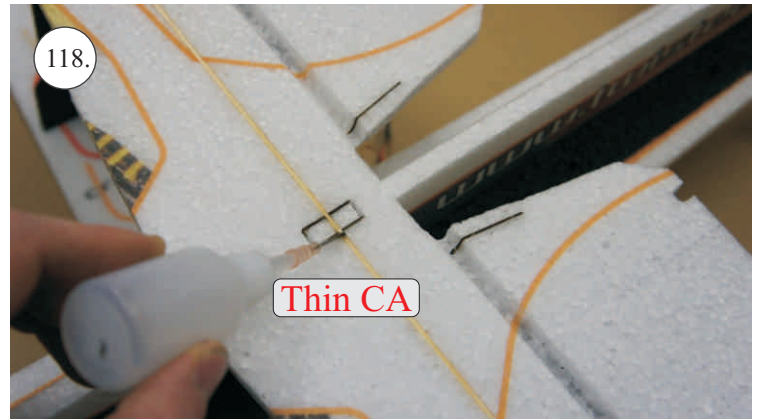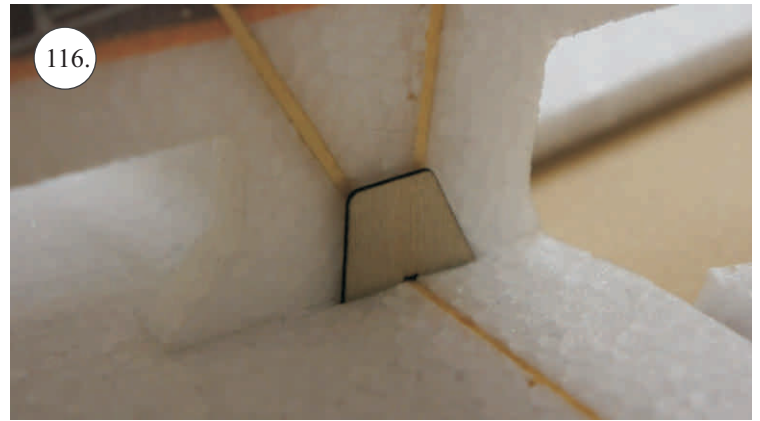
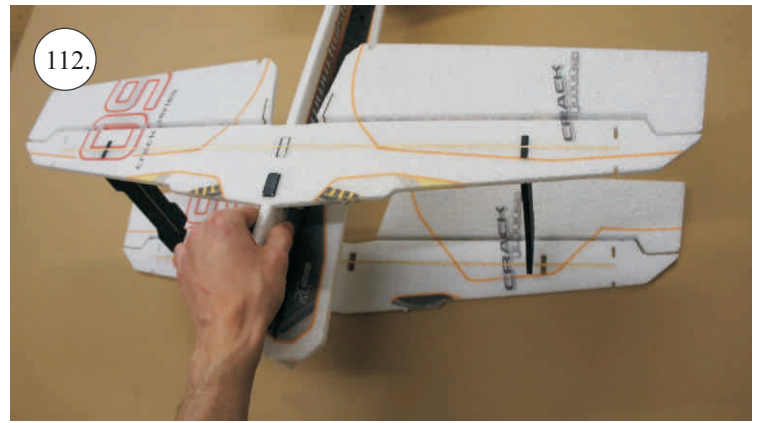
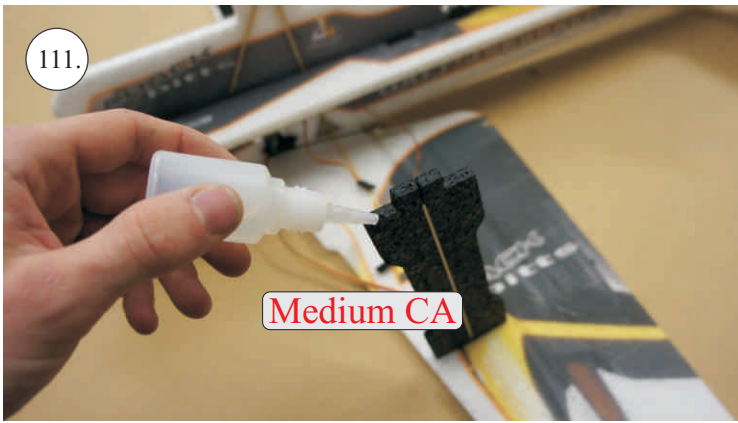


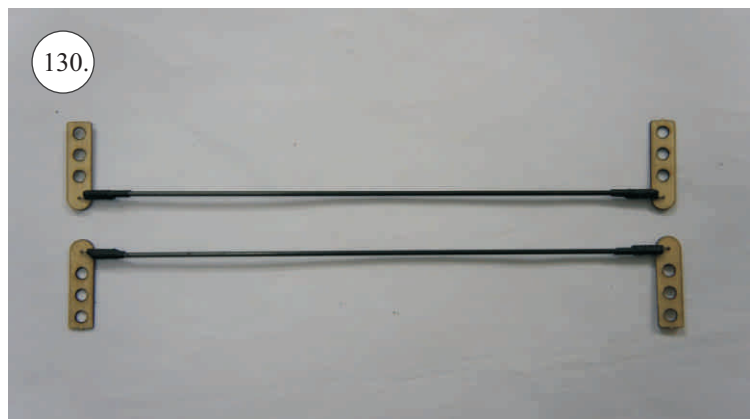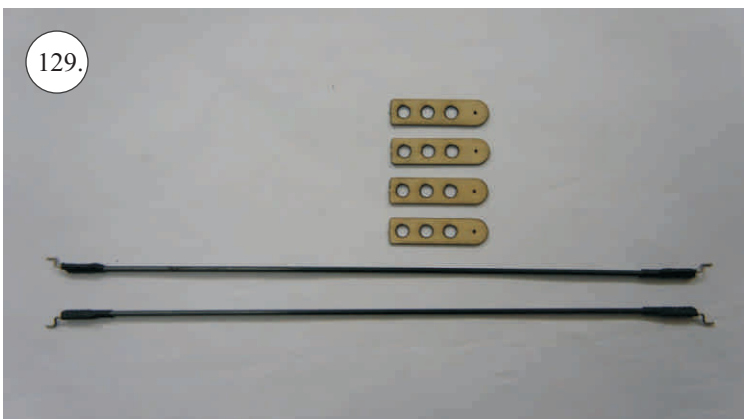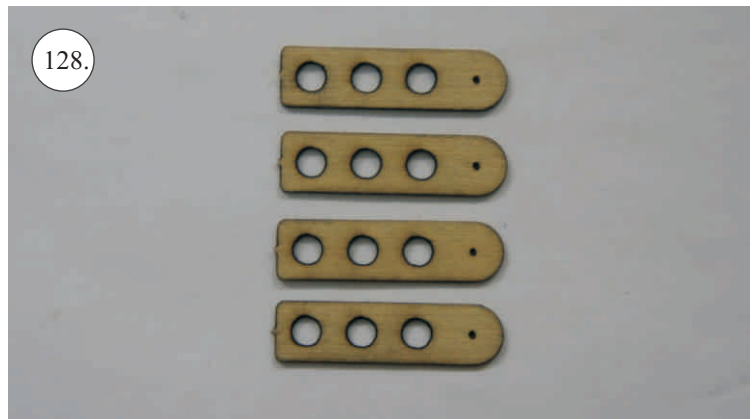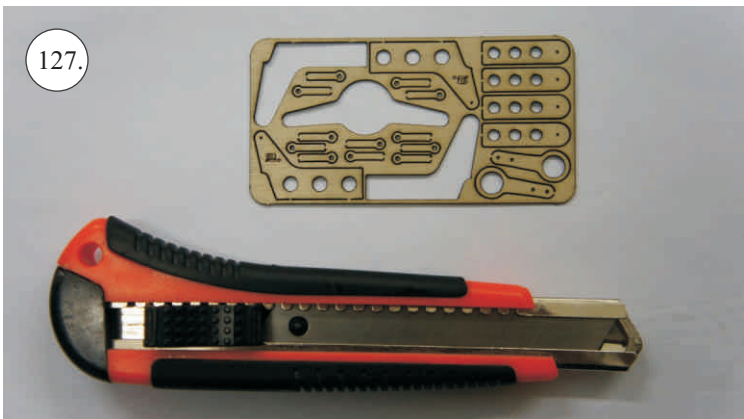
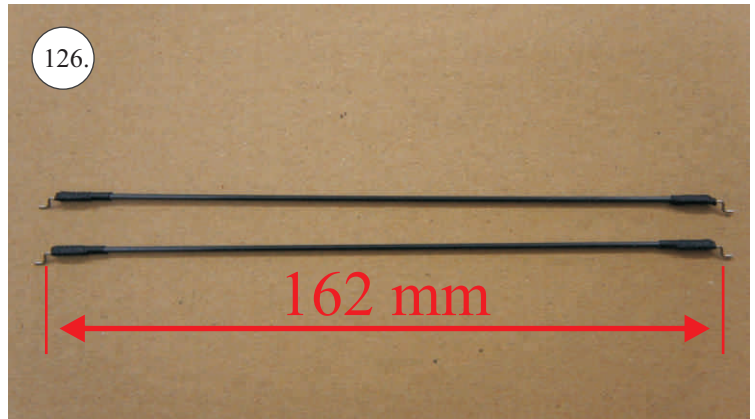
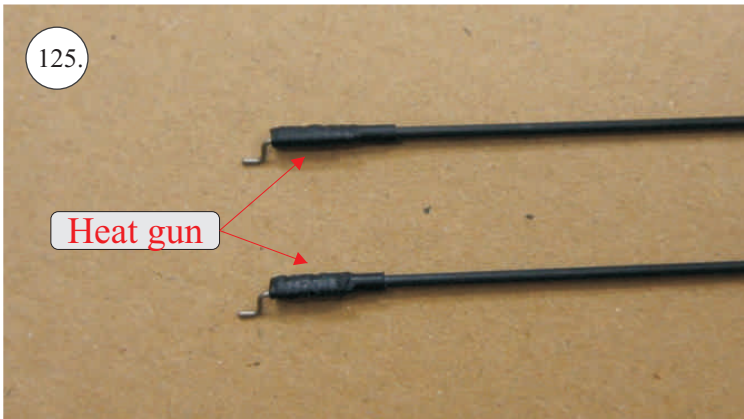
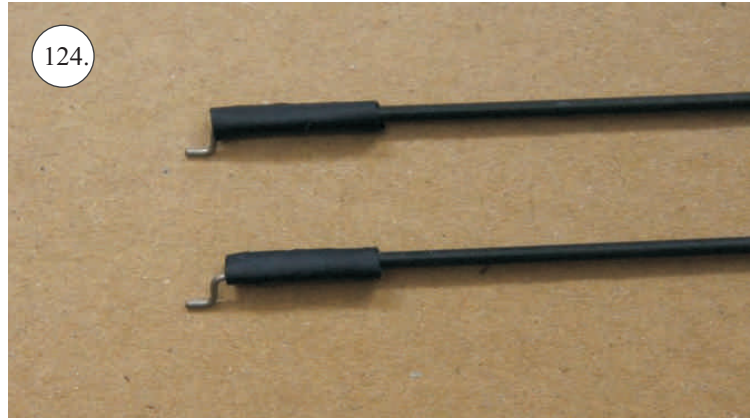
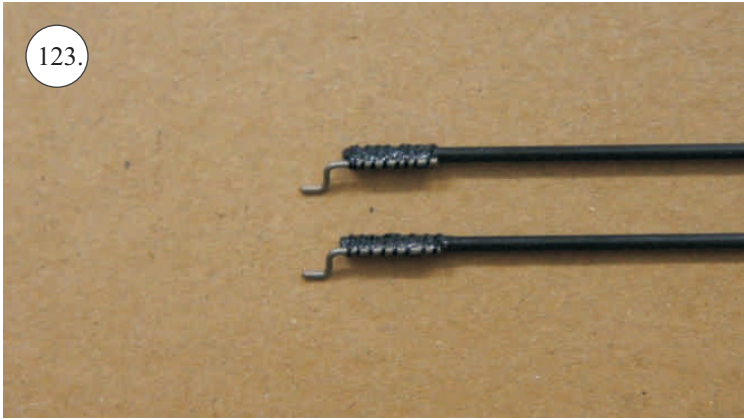
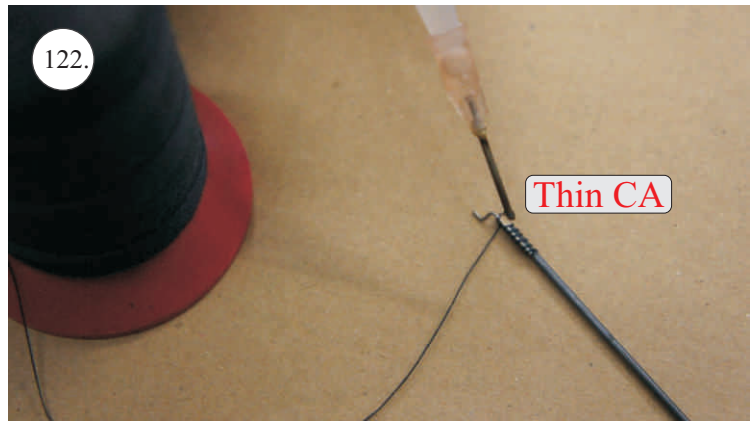
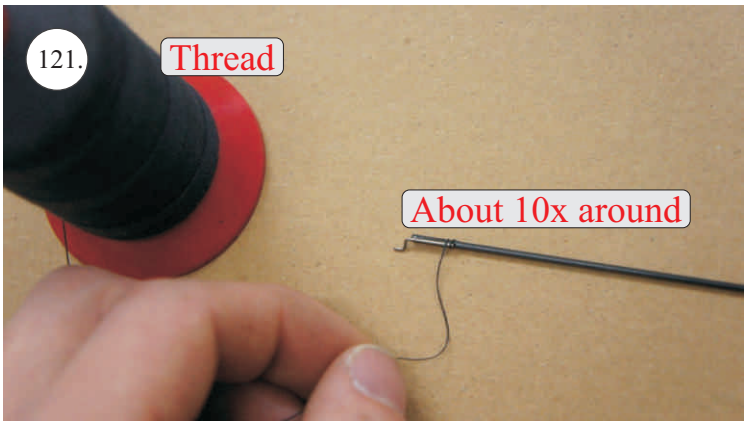




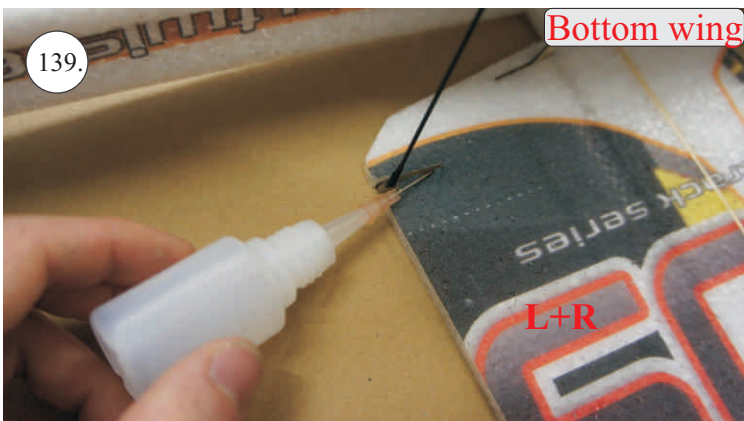
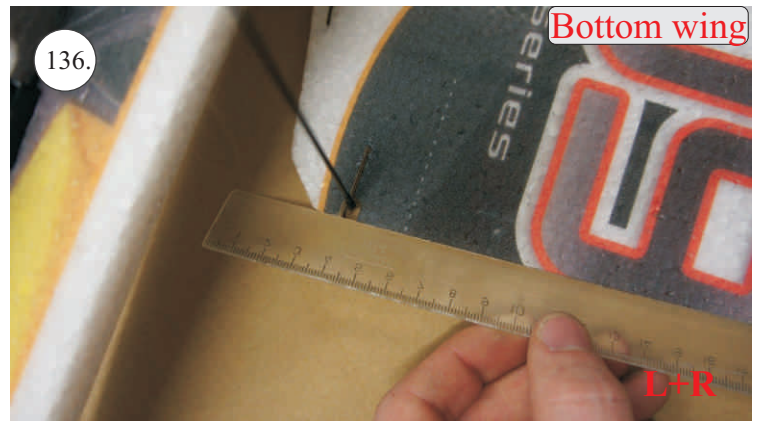
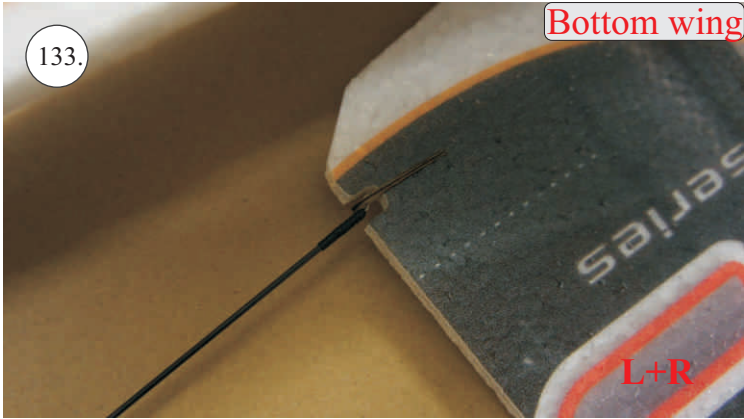
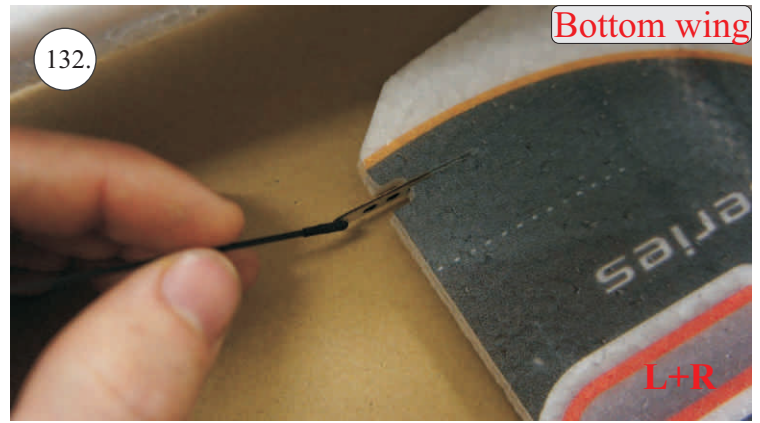



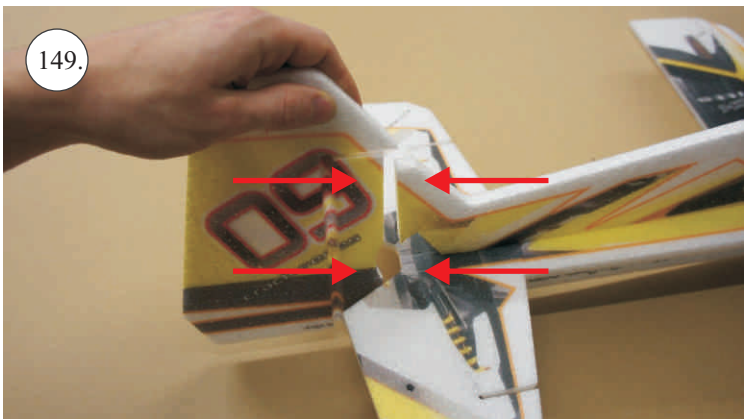
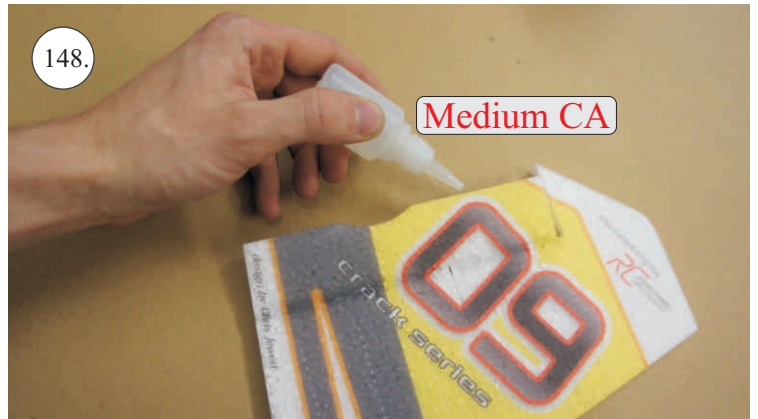
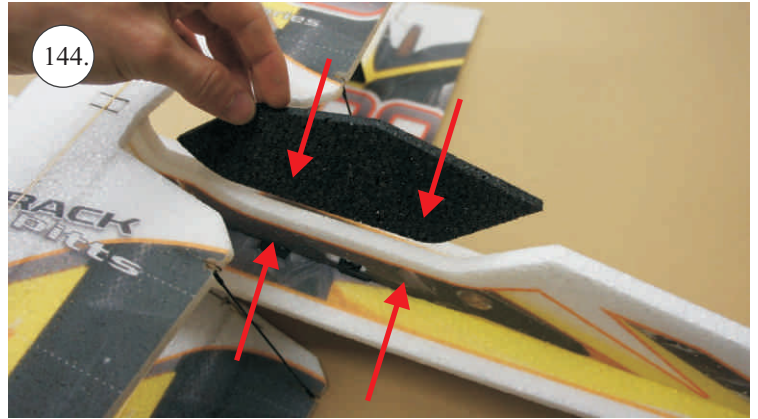
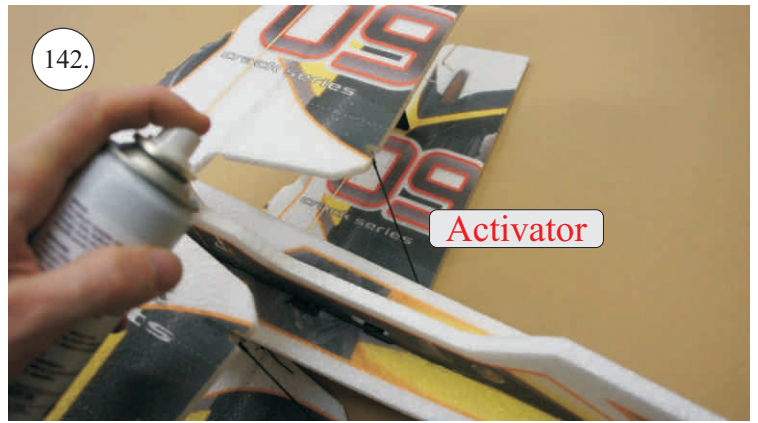


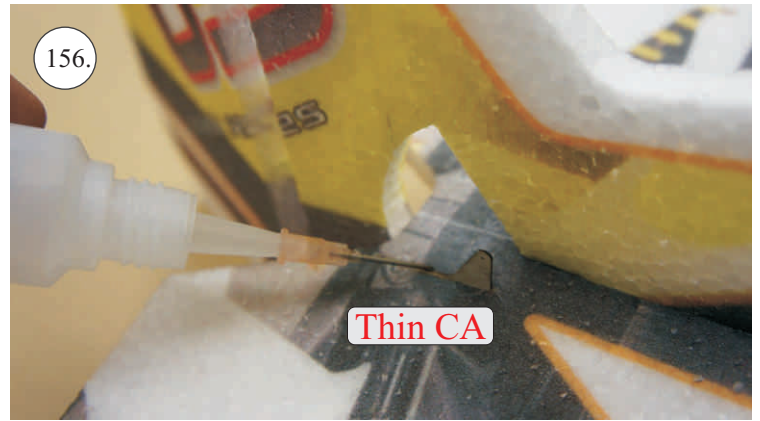
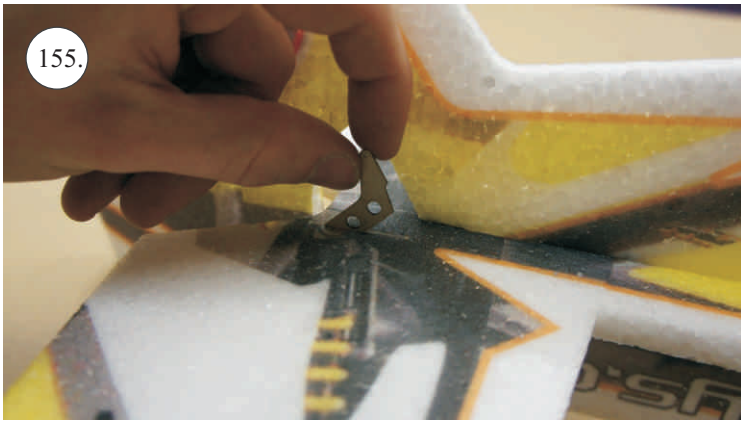
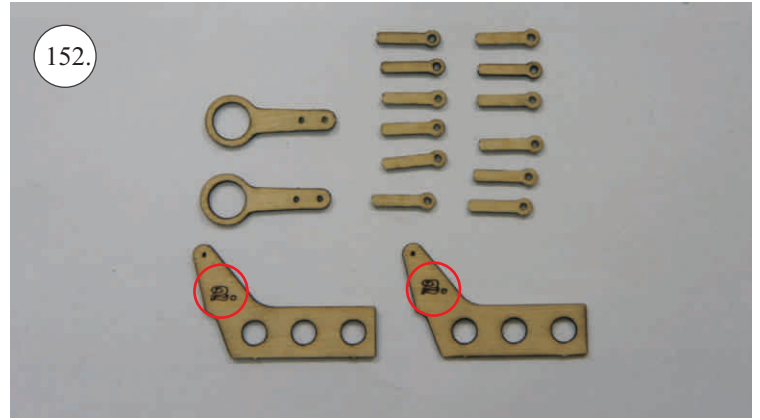
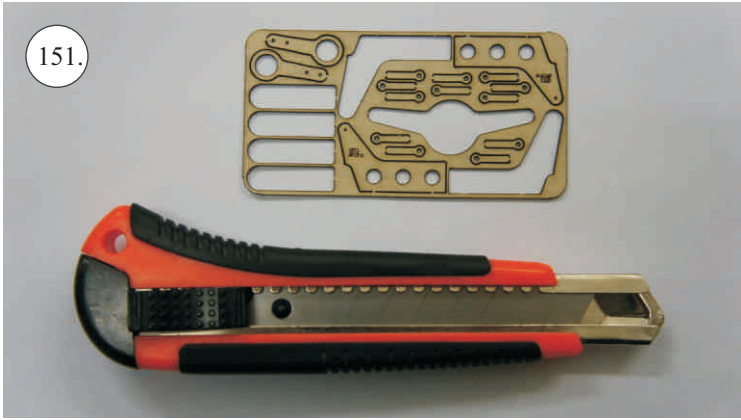


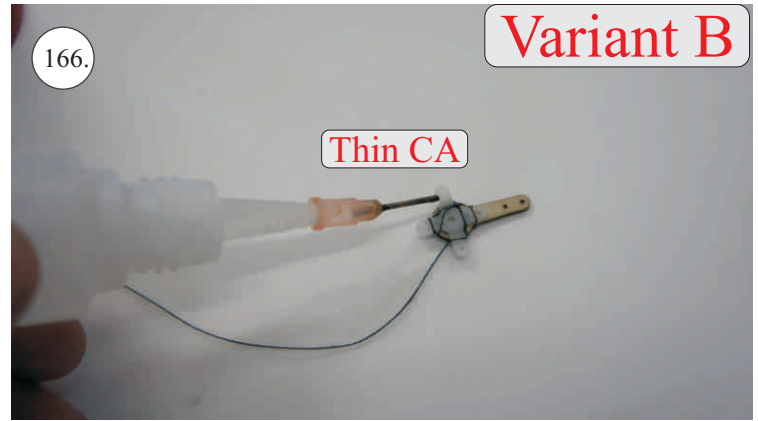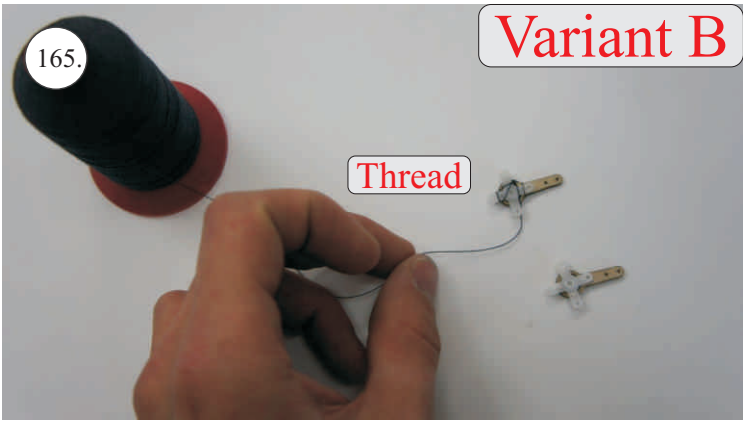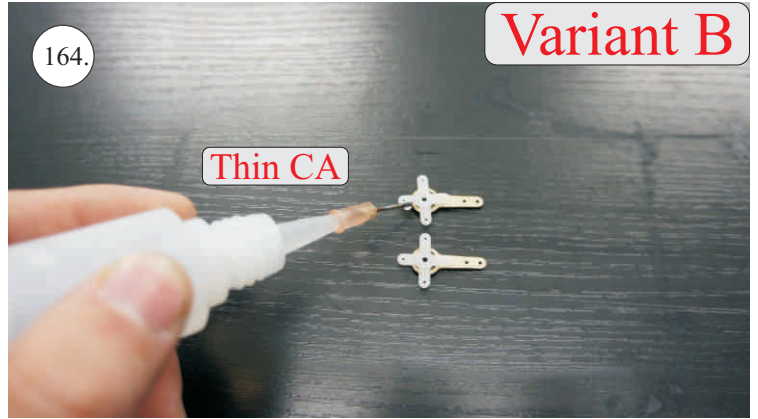

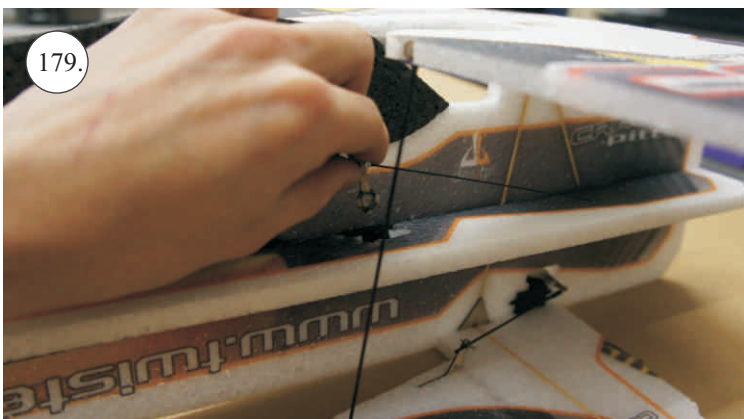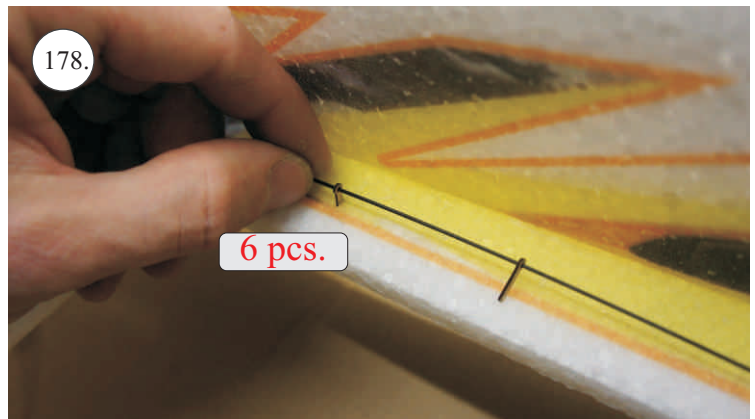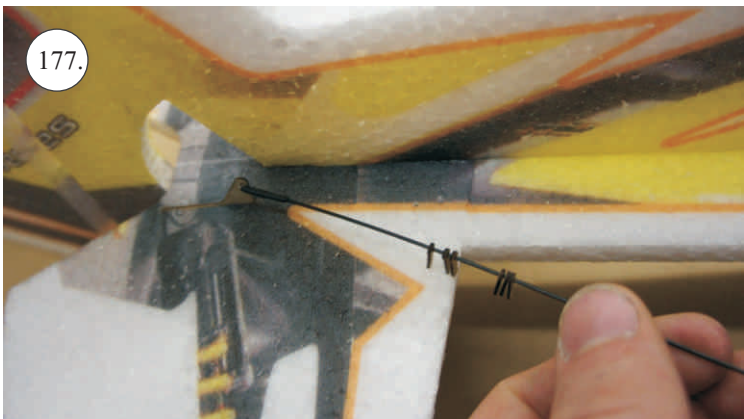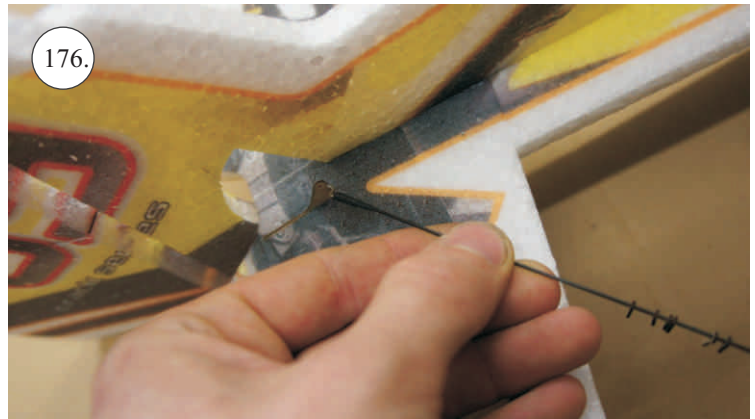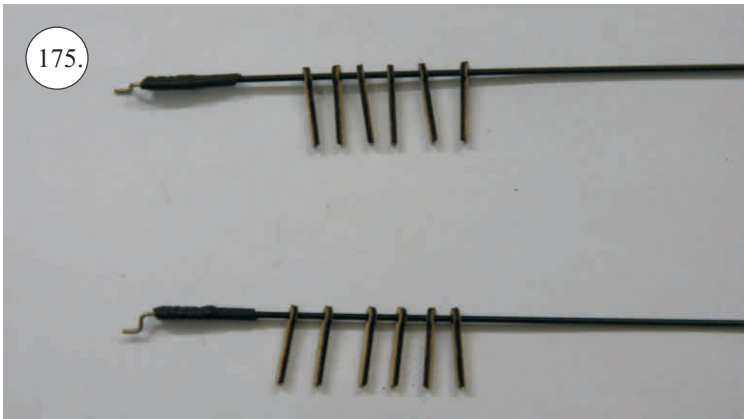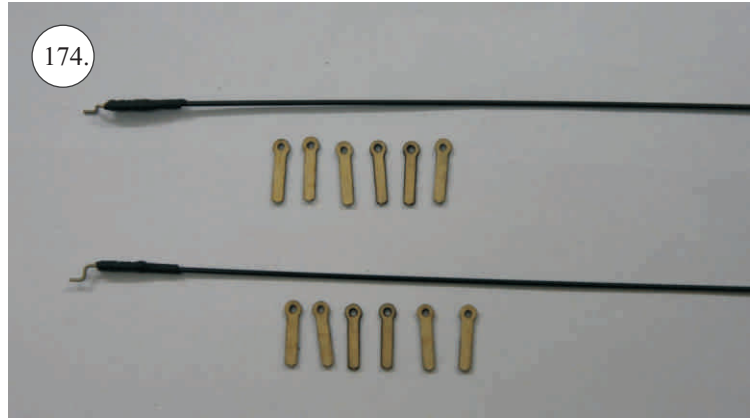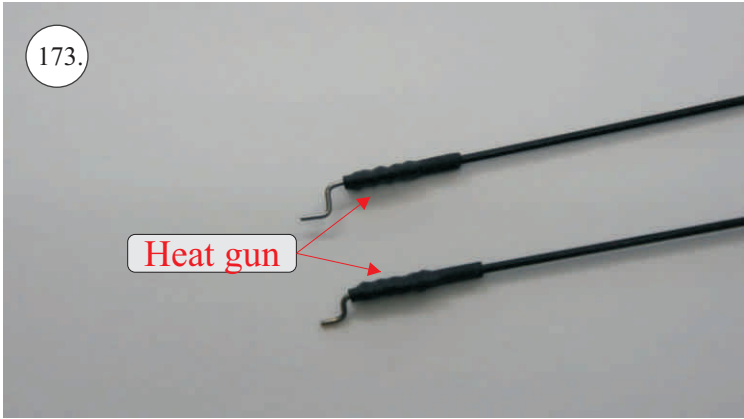

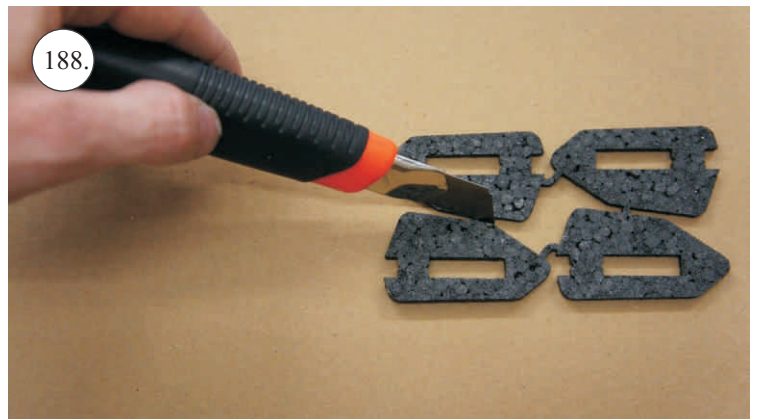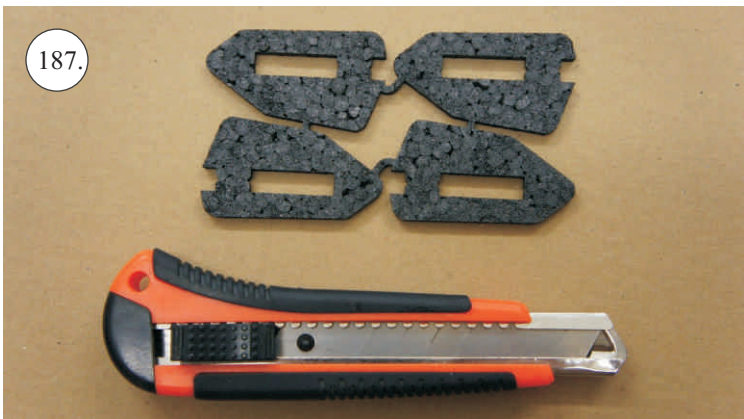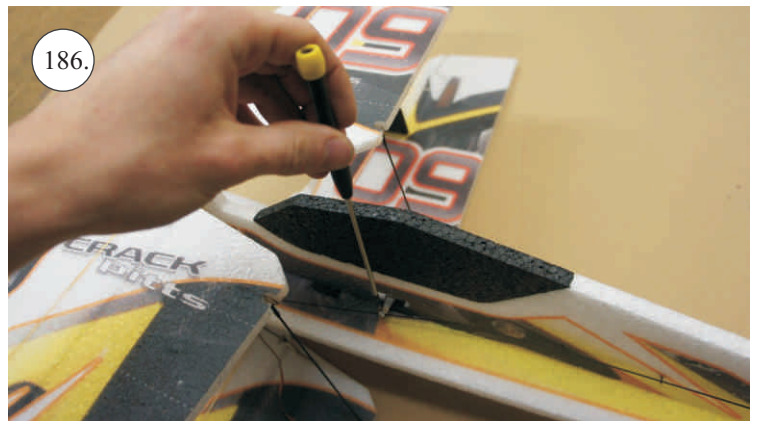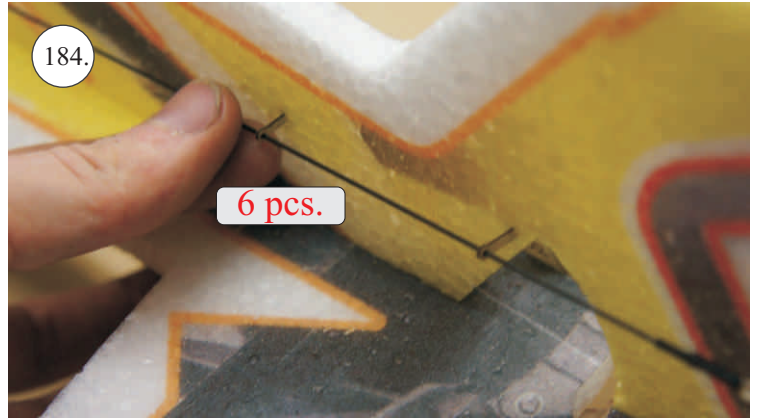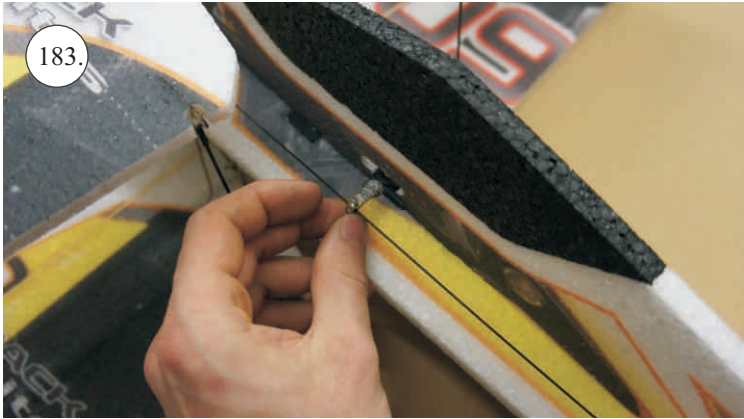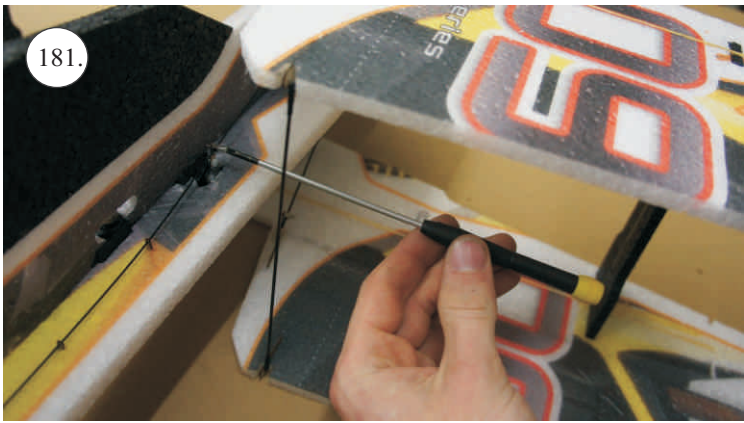

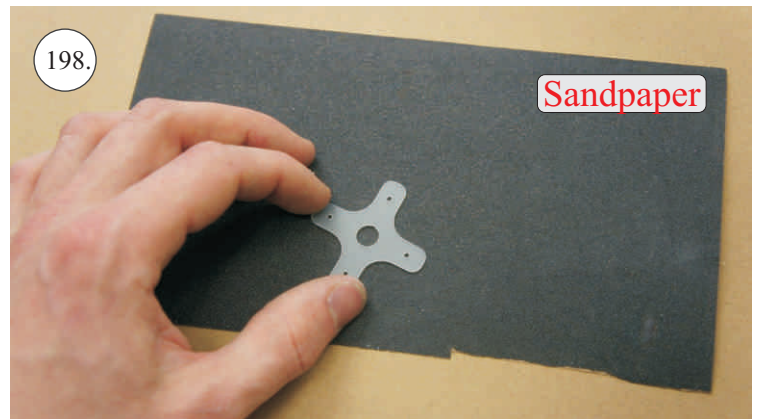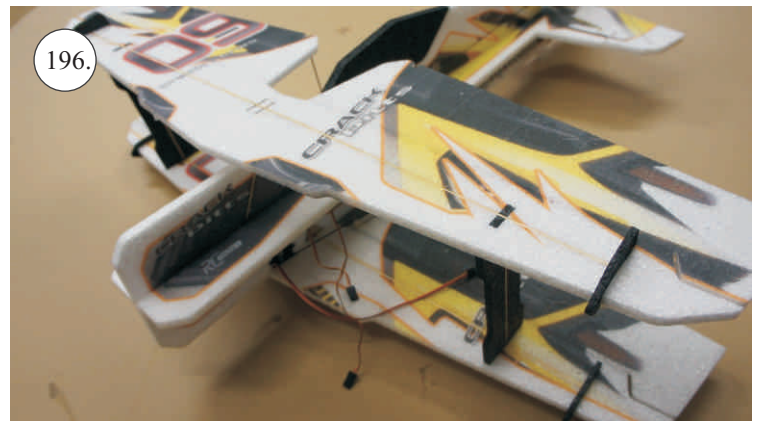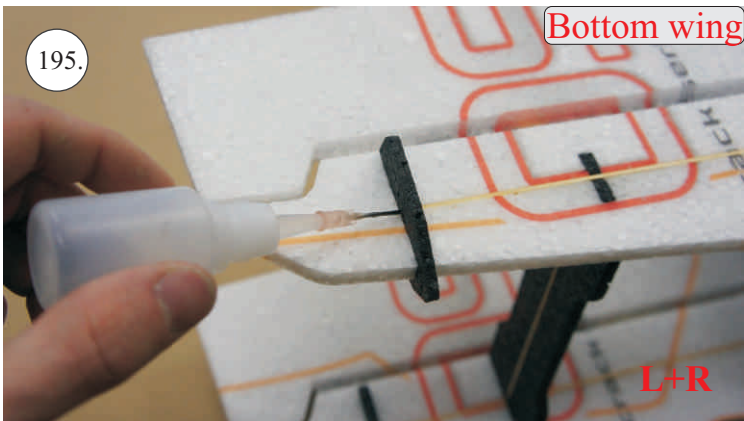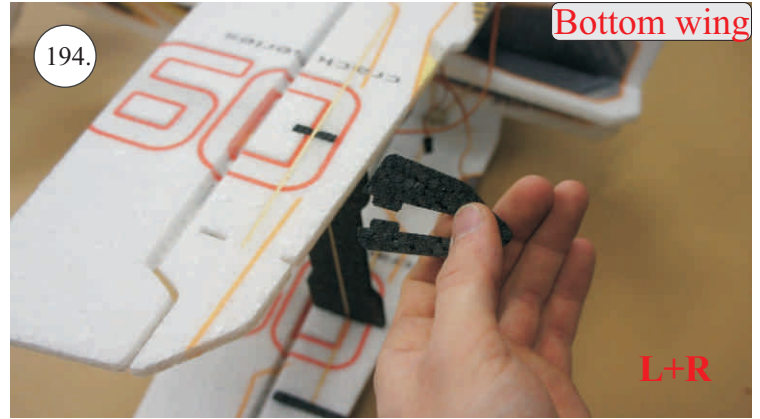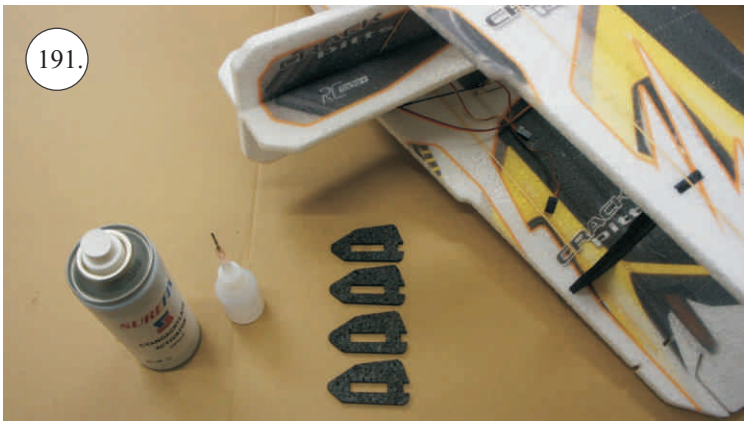

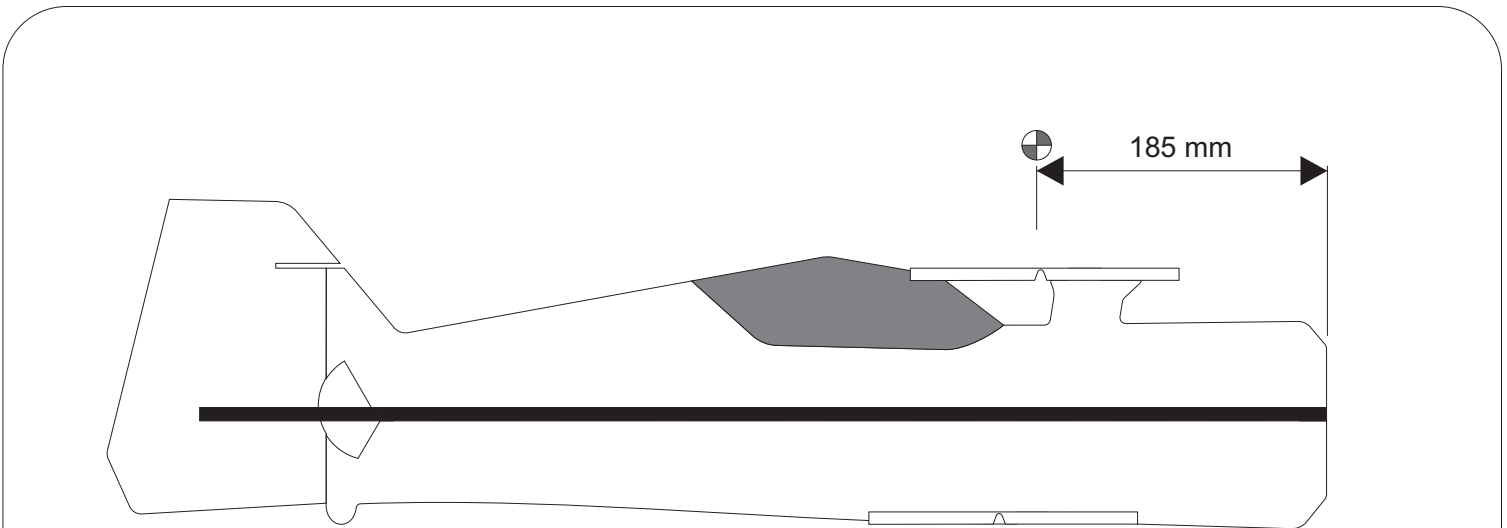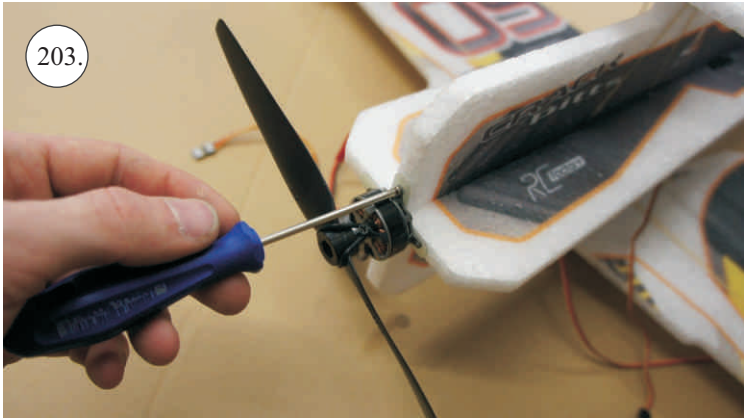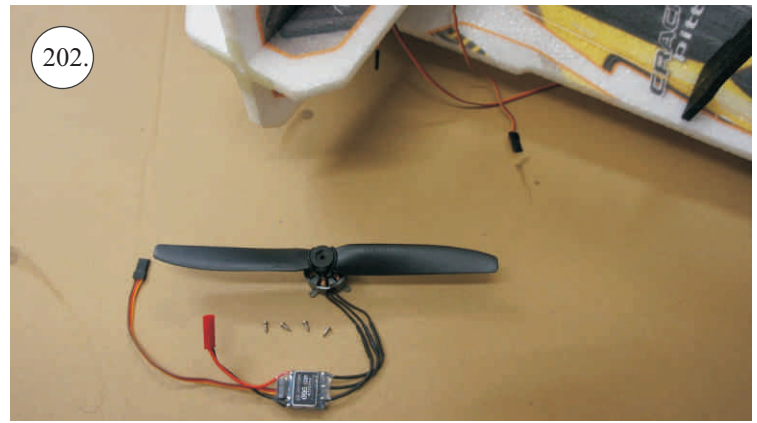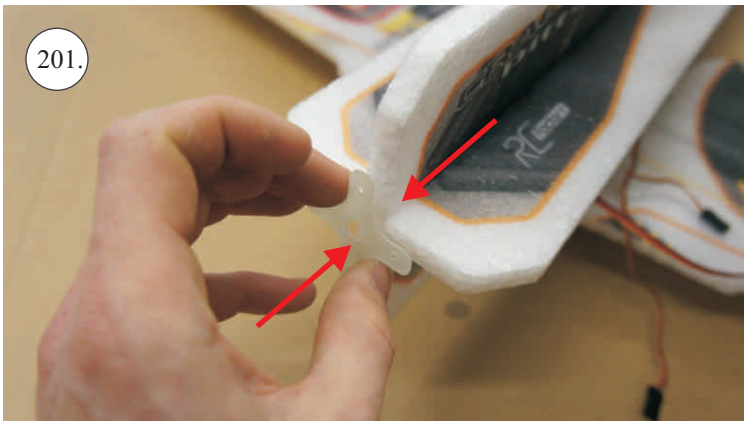

185 mm

We wish you many happy flying hours with the Crack Pitts.

Your RC-Factory team.